
AM RADIO KIT

MODEL AM-780K



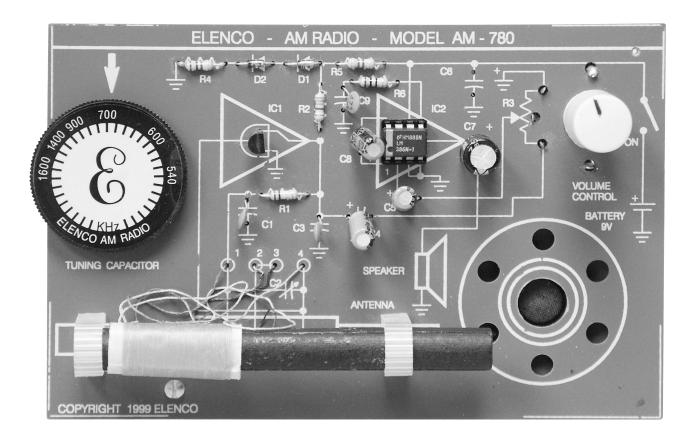

Assembly and Instruction Manual

Elenco® Electronics, Inc.

REV-H

PARTS LIST

Screw 2-56 x 5/16"


If you are a student, and any parts are missing or damaged, please see instructor or bookstore.

If you purchased this kit from a distributor, catalog, etc., please contact Elenco® Electronics (address/phone/e-mail is at the back of this manual) for additional assistance, if needed. **DO NOT** contact your place of purchase as they will not be able to help you.

			RESIS			
Qty.	Symbol	Value		Color C	Part #	
1	R6	10Ω 5% 1/4W	/	brown-b	lack-black-gold	121000
1	R4	150Ω 5% 1/4	W	brown-g	reen-brown-gold	131500
1	R2	3.3 k Ω 5% $1/4$	łW	orange-	orange-red-gold	143300
1	R5	8.2kΩ 5% 1/4	łW	gray-rec	I-red-gold	148200
1	R1	100kΩ 5% 1/4	4W	brown-b	lack-yellow-gold	161000
1	R3	Potentiomete	ometer 50k Ω &			192522
		switch w/ Nut	& Washer			
			CAPAC	ITORS		
Qty.	Symbol	Value	Description			Part #
□ 1	C2		Variable Tuning Ca	apacitor		211677
1	C1	.01μF	Discap (103)	•		241031
1 2	C3, C9	.047μF	Discap (473)			
□ 3	C4, C5, C8	10μF	Electrolytic Radial			271045
□ 2	C6, C7	470μF	Electrolytic Radial			284743
			SEMICON	DUCTO	RS	_
Qty.	Symbol	Value	Description			Part #
□ 2	D1, D2	1N4148	Semiconductor Sil	icon Dio	de	314148
□ 1	IC2	LM-386	Integrated Circuit			330386
□ 1	IC1	484 / 7642	Integrated Circuit			33K484
			MISCELL	ANEOL	JS	
Qty.	Description		Part #	Qty.	Description	Part #
1	Antenna with	Holders	484004	2	Screw M2.5 x 3.8mm	641310
1	PC Board		517053	1	Nut 2-56	644201
1	Battery Holder		590096	1	Socket IC 8-pin	664008
1	Speaker 8Ω		590102	□ 1	Label	720422
1	Knob for Vari	able Capacitor	622040	□ 1	Speaker Pad	780128
1	Knob for Pote		622050	1 4	Wire 2"	814120
□ 1	Screw M2.5 >	k 7.5mm	641107	□ 1	Solder Lead-free	9LF99

PARTS IDENTIFICATION

641231

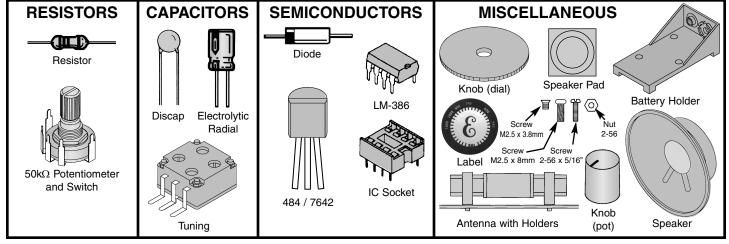

You Will Need:

- 9V Battery
- 25 or 30 watt Soldering Iron
- Small Phillips and Slotted Screwdrivers
- Long Nose Plier
- Side Cutters

IDENTIFYING RESISTOR VALUES


Use the following information as a guide in properly identifying the value of resistors.

BAND 1 1st Digit			
Color	Digit		
Black	0		
Brown	1		
Red	2		
Orange	3		
Yellow	4		
Green	5		
Blue	6		
Violet	7		
Gray	8		
White	9		

BAND 2 2nd Digit				
Color	Digit			
Black	0			
Brown	1			
Red	2			
Orange	3			
Yellow	4			
Green	5			
Blue	6			
Violet	7			
Gray	8			
White	9			

Multiplier				
Color	Multiplier			
Black	1			
Brown	10			
Red	100			
Orange	1,000			
Yellow	10,000			
Green	100,000			
Blue	1,000,000			
Silver	0.01			
Gold	0.1			

Resistance Tolerance				
Color	Tolerance			
Silver	±10%			
Gold	±5%			
Brown	±1%			
Red	±2%			
Orange	±3%			
Green	±0.5%			
Blue	±0.25%			
Violet	±0.1%			

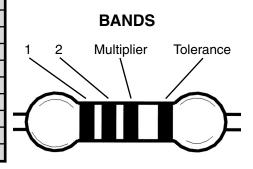


IDENTIFYING CAPACITOR VALUES

Capacitors will be identified by their capacitance value in pF (picofarads), nF (nanofarads), or μ F (microfarads). Most capacitors will have their actual value printed on them. Some capacitors may have their value printed in the following manner. The maximum operating voltage may also be printed on the capacitor.


Electrolytic capacitors have a positive and a negative electrode. The negative lead is indicated on the packaging by a stripe with minus signs and possibly arrowheads.

Warning:

If the capacitor is connected with incorrect polarity, it may heat up and either leak, or cause the capacitor to explode.



Multiplior	For the No.	0	1	2	3	4	5	8	9
Multiplier	Multiply By	1	10	100	1k	10k	100k	.01	0.1



The value is $10 \times 1,000 = 10,000$ pF or .01µF .100V

Note: The letter "R" may be used at times to signify a decimal point; as in 3R3 = 3.3

METRIC UNITS AND CONVERSIONS

Abbreviation	Means	Multiply Unit By	Or
р	Pico	.00000000001	10-12
n	nano	.00000001	10-9
μ	micro	.000001	10-6
m	milli	.001	10 ⁻³
_	unit	1	10°
k	kilo	1,000	10 ³
M	mega	1,000,000	10 ⁶

1. 1,000 pico units	= 1 nano unit			
2. 1,000 nano units	= 1 micro unit			
3. 1,000 micro units	= 1 milli unit			
4. 1,000 milli units	= 1 unit			
5. 1,000 units = 1 kilo unit				
6. 1,000 kilo units	= 1 mega unit			

^{*}The letter M indicates a tolerance of ±20% The letter K indicates a tolerance of ±10% The letter J indicates a tolerance of +5%

WHAT IT IS

The AM-780K is a tuned radio frequency (TRF) receiver of the standard AM (amplitude modulation) broadcast frequencies (550kHz - 1600kHz). Easy-to-build, using only two integral circuits (IC).

Assembly of your AM-780K AM Radio Kit will prove to be an exciting project and give you much satisfaction and personal achievement. Care must be given to identifying the proper components and in good soldering habits. Above all, take your time and follow these easy step-by-step instructions. Remember, "An ounce of prevention is worth a pound of cure". Avoid making mistakes and no problems will occur.

Construction Time: About 3 Hours.


INTRODUCTION

The Model AM-780K AM Radio can be best understood by analysis of the block diagram shown in Figure 1.


The coils on the ferrite rod antenna (L1 and L2) and the variable capacitors (C2) make up a "tuned circuit" (see schematic diagram below). It is a very selective filter. The frequency is selectable over a certain range by adjusting the tuning capacitor. The selectable signal is passed into IC1 (integrated circuit 484/7642) where it is amplified and then detected. The 484/7642 is a monolithic integral circuit equal to a ten transistor tuned radio frequency circuit. The resistor R2 and the capacitor C3 set the automatic gain control of IC1. The 484/7642 requires a low voltage power supply (1.1 - 1.8V). The voltage drop across diodes D1, D2, and resistor R4 is the correct supply voltage to IC1.

The output from a diode detector of the 484/7642 is typically 40 - 60mV. This audio signal is too weak to drive a speaker directly. Capacitor C3 filters out the radio frequency component of the signal, leaving a clean audio signal.

The amount of gain control is varied by potentiometer R3, which also varies the audio level and consequently the volume. Capacitor C5 couples the audio signal from the volume control to the input of the audio amplifier. Our kit uses the standard design for the audio amplifier on the base of the integral circuit LM-386. To make the LM-386 a more versitile amplifier, two pins (1 and 8) are provided for gain control. With pins 1 and 8 open, the gain at 20, the capacitor will go up to 200. Capacitor C7 blocks the DC from the speaker while allowing the AC to pass.

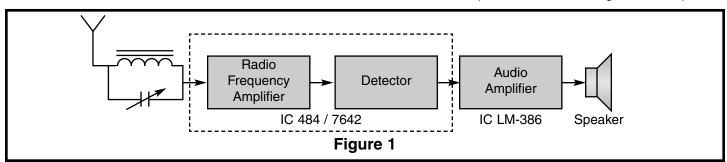

SCHEMATIC DIAGRAM AM-780K

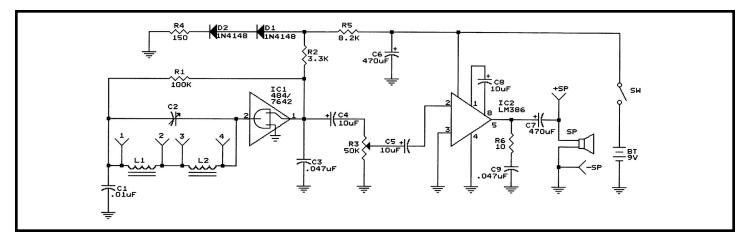

CONSTRUCTION

Introduction

The most important factor in assembling your AM-780K AM Radio Kit is good soldering techniques. Using the proper soldering iron is of prime importance. A small pencil type soldering iron of 25 - 40 watts is recommended. The tip of the iron must be kept clean at all times and well tinned.

Solder

For many years leaded solder was the most common type of solder used by the electronics industry, but it is now being replaced by lead-free solder for health reasons. This kit contains lead-free solder, which contains 99.3% tin, 0.7% copper, and has a rosin-flux core.

Lead-free solder is different from lead solder: It has a higher melting point than lead solder, so you need higher temperature for the solder to flow properly. Recommended tip temperature is approximately 700°F; higher temperatures improve solder flow but accelerate tip decay. An increase in soldering time may be required to achieve good results. Soldering iron tips wear out faster since lead-free solders are more corrosive and the higher soldering temperatures accelerate corrosion, so proper tip care is important. The solder joint finish will look slightly duller with lead-free solders.

Use these procedures to increase the life of your soldering iron tip when using lead-free solder:

- · Keep the iron tinned at all times.
- Use the correct tip size for best heat transfer. The conical tip is the most commonly used.

- Turn off iron when not in use or reduce temperature setting when using a soldering station.
- Tips should be cleaned frequently to remove oxidation before it becomes impossible to remove. Use Dry Tip Cleaner (Elenco® #SH-1025) or Tip Cleaner (Elenco® #TTC1). If you use a sponge to clean your tip, then use distilled water (tap water has impurities that accelerate corrosion).

Safety Procedures

 Always wear safety glasses or safety goggles to protect your eyes when working with tools or soldering iron, and during all phases of testing.



- Be sure there is adequate ventilation when soldering.
- Locate soldering iron in an area where you do not have to go around it or reach over it. Keep it in a safe area away from the reach of children.
- Do not hold solder in your mouth. Solder is a toxic substance.
 Wash hands thoroughly after handling solder.

Assemble Components


In all of the following assembly steps, the components must be installed on the top side of the PC board unless otherwise indicated. The top legend shows where each component goes. The leads pass through the corresponding holes in the board and are soldered on the foil side. **Use only rosin core solder.**

DO NOT USE ACID CORE SOLDER!


What Good Soldering Looks Like

A good solder connection should be bright, shiny, smooth, and uniformly flowed over all surfaces.


 Solder all components from the copper foil side only. Push the soldering iron tip against both the lead and the circuit board foil.

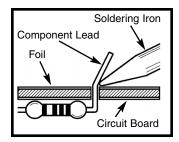


 Apply a small amount of solder to the iron tip. This allows the heat to leave the iron and onto the foil. Immediately apply solder to the opposite side of the connection, away from the iron. Allow the heated component and the circuit foil to melt the solder.

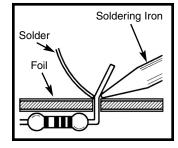


- Allow the solder to flow around the connection. Then, remove the solder and the iron and let the connection cool. The solder should have flowed smoothly and not lump around the wire lead.
- 4. Here is what a good solder connection looks like.

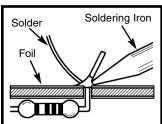




Types of Poor Soldering Connections

 Insufficient heat - the solder will not flow onto the lead as shown.

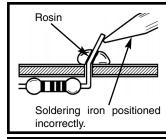


Insufficient solder - let the solder flow over the connection until it is covered.


Use just enough solder to cover the connection.



- Excessive solder could make connections that you did not intend to between adjacent foil areas or terminals.
- Solder bridges occur when solder runs between circuit paths and creates a short circuit. This is usually caused by using too much solder.


To correct this, simply drag your soldering iron across the solder bridge as shown.



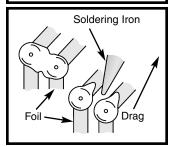

ASSEMBLE COMPONENTS TO THE PC BOARD

Place a check mark [7] in the box provided next to each step to indicate that the step is completed.

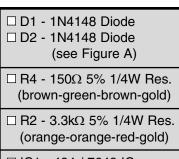

- □ IC1 484 / 7642 IC (see Figure B)
- \square R1 100k Ω 5% 1/4W Res. (brown-black-yellow-gold)
- ☐ C1 .01μF Discap (103)
- ☐ C3 .047μF Discap (473)
- □ C5 10µF Electrolytic
- □ C4 10μF Electrolytic
- □ C8 10µF Electrolytic (see Figure C)

Figure A

Mount diode with the band in the same direction as marked on the PC board. Solder and cut off the excess leads.





Figure B

Mount the IC with the flat side in the same direction as marked on the PC board. Solder and cut off the excess leads.



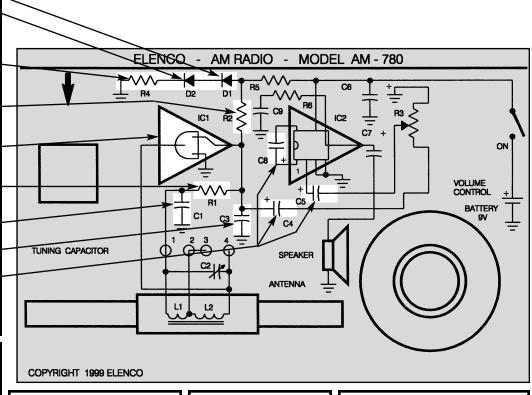


Figure C

Polarity Mark

Electrolytics have a polarity marking indicating the (-) lead. The PC board is marked to show (-) (+) the lead position.

Warning: If the capacitor is connected with incorrect polarity, or if it is subjected to voltage exceeding its working voltage, it may heat up and either leak or cause the capacitor to explode.

Figure Ca

Mount capacitor C6 on the back of the PC board in the location shown. Make sure the lead with the polarity marking is in the correct hole as shown.


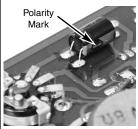


Figure D

Insert the IC socket into the PC board with the notch in the direction shown on the top legend. Solder the IC socket into place. Insert the IC into the socket with the notch in the same direction as the notch on the socket.




Step 1: If the speaker pad has center and outside pieces, then remove them. Peel the backing off of one side of the speaker pad and stick the pad onto the speaker.


Step 2: Remove the other backing from the speaker pad.

Step 3: Stick the speaker onto the solder side of the PC board.

Step 4: Solder the 2 wires from the speaker to the pads +SP and -SP.

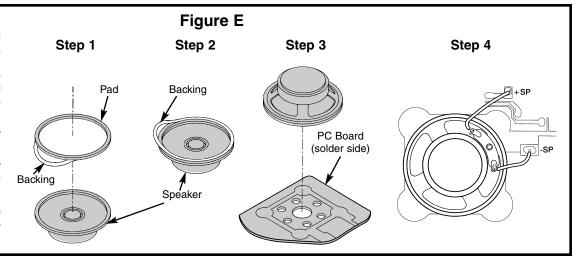

ASSEMBLE COMPONENTS TO THE PC BOARD

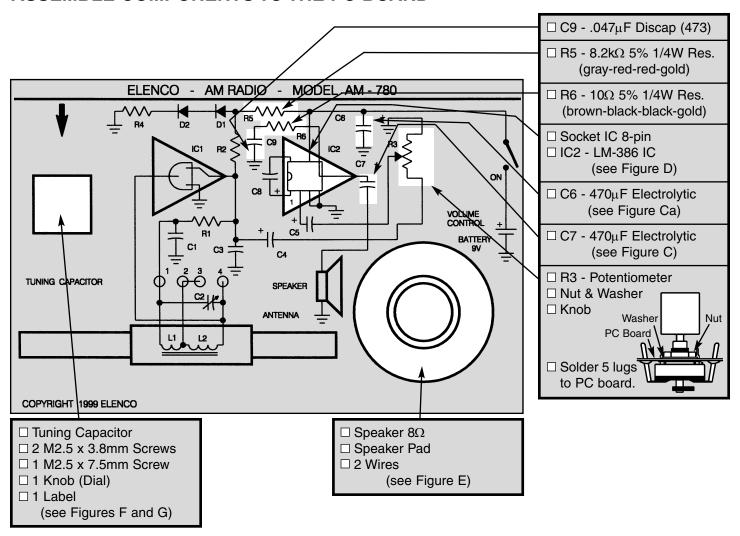

Tuning Capacitor Figure F

Your kit may contain a 3 lead or a 4 lead capacitor. Bend the leads as shown. Fasten C1 into place on the top side of the PC board with two M2.5 \times 3.8mm screws. Fasten the knob to the shaft of the gang with an M2.5 \times 7.5mm screw.


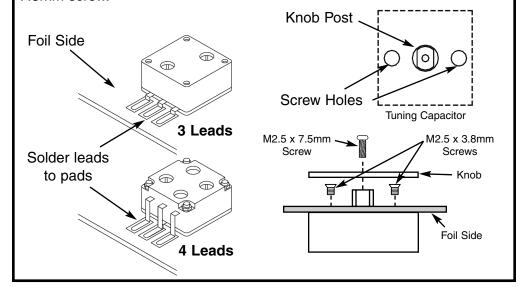


Figure G


Turn the dial fully clockwise. Remove the protective backing from the label and align the 1600 with the arrow on the PC board. **NOTE: SAVE** the protective backing from the label for it will be used on page 8.

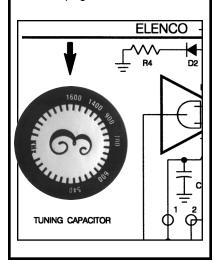


INSTALL BATTERY HOLDER AND ANTENNA

- ☐ Bend the leads of the battery holder as shown in Figure H. Fasten the battery holder to the PC board with a 2-56 x 5/16" screw and 2-56 nut. Solder the leads to the PC board pads as shown.
- ☐ Install the antenna coil as shown in Figure I.


☐ Wire 3 (blue) to the hole marked "3" ☐ Wire 4 (white) to the hole marked "4"

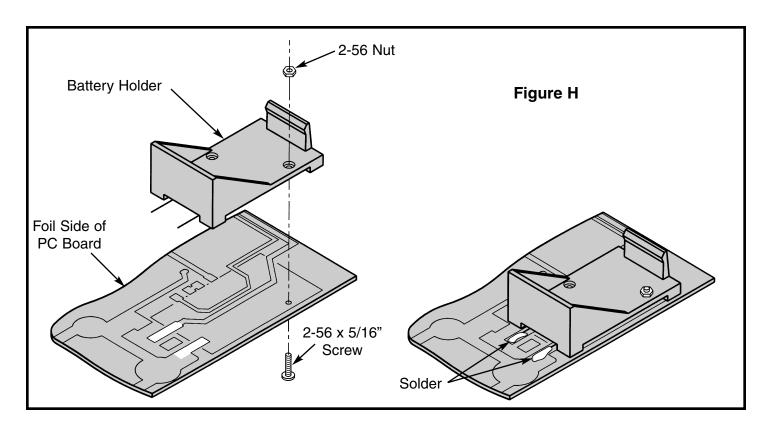

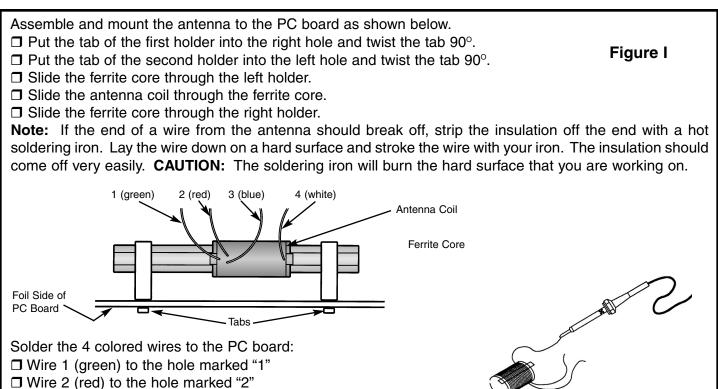


ALIGNMENT

☐ Using a small, slotted screwdriver, adjust the trimmer located on the back of the tuning capacitor to minimum capacitance (as shown in Figure J).

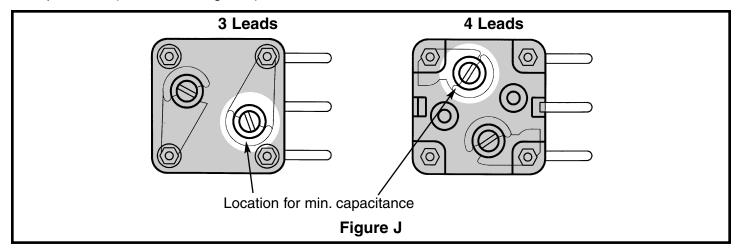

- ☐ Turn the power OFF. Put a fresh 9V battery into the battery holder and turn the power ON. Adjust the volume to a comfortable level. Tune the dial (around 1000kHz) until a weak station is heard. Carefully slide the antenna coil on its ferrite core until the station is at its loudest.
- Figure K
- ☐ Use the paper left over from the Radio Dial Label used in Figure G and fold it in half as shown in Figure K. Fold it in half once more as shown. Now you have a shim to hold the coil in place.
- ☐ Slide the shim, in-between the coil and the ferrite core as shown in Figure L.

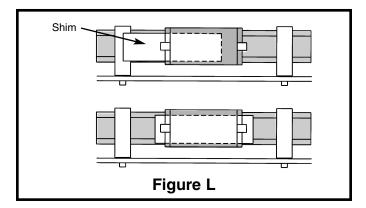

TROUBLESHOOTING


Contact Elenco® Electronics if you have any problems. **DO NOT** contact your place of purchase as they will not be able to help you.


- 1. One of the most frequently occurring problems is poor solder connections.
 - a) Tug slightly on all parts to make sure that they are indeed soldered.
 - b) All solder connections should be shiny. Resolder any that are not.
 - c) Solder should flow into a smooth puddle rather than a round ball. Resolder any connection that has formed into a ball.
- d) Have any solder bridges formed? A solder bridge may occur if you accidentally touch an adjacent foil by using too much solder or by dragging the soldering iron across adjacent foils. Break the bridge with your soldering iron.
- 2. Use a fresh 9V battery.

- 3. Make sure that all of the parts are placed in their correct positions. Check if the IC, diode and lytic orientations are correct.
- 4. Use a 2" wire to short capacitor C2 (see Figure M). Turn the volume control up halfway:
 - a) Short by wire, the speaker terminals several times. If you don't hear tapping from the speaker, check the speaker, battery, battery holder, capacitor C6 and the switch.
 - b) Short by wire, pins 4 and 5 of IC2 several times. If you don't hear tapping from the speaker, check the wires from the PC board to the speaker and capacitor C7.
 - c) Short pins 2 and 3 of IC2 several times. If you don't hear tapping from the speaker, check IC2 and capacitor C8.
 - d) Short pins 1 and 3 of IC1 several times. If you don't hear tapping from the speaker, check capacitors C3, C4 and C5 and resistor R3.
 - e) Short pins 2 and 3 of IC1 several times. If you don't hear tapping from the speaker, check IC1, R1, R2, R4, R5, D1, D2 and C1. Turn OFF power. Remove the short wire from C2.
 - f) Check the antenna coils L1 and L2 and capacitor C2. If you have an ohmmeter, measure the resistance on the pads of capacitor C2 (see Figure N). The resistance should be approximately 11Ω . If the resistance is infinity, check the antenna coils L1 and L2. If the resistance is around "0", check capacitor C2.
- 5. The DC voltage readings below should be used for test conditions: Volume set to minimum, battery voltage = 9V; all voltages are referenced to the circuit common. Voltage readings can vary $\pm 10\%$.

Note: C2 should be shorted.

(IC2)	1 - 1.32V 2 - 8mV 3 - 0	(IC1)	1 (output)830V 2 (input)810V 3 (GND) - 0
	4 - 0 5 - 4.35V		3 (GND) - 0
	6 - 9V		Anode of D1 - 1.33V
	7 - 4.55V		Anode of D2720
	8 - 1 33\/		

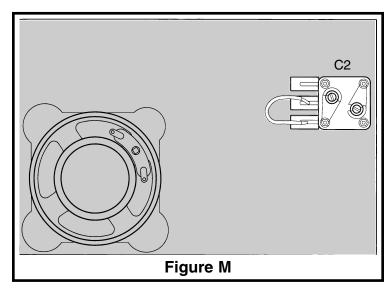

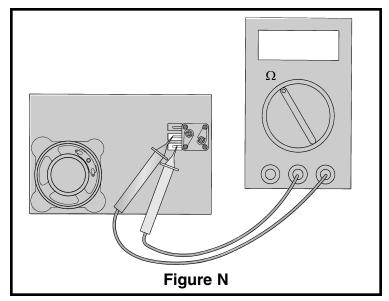

GLOSSARY

AGC Automatic Gain Control. FΜ Frequency Modulation. AF Audio Frequency Frequency Wave or pulse repetition rate. AM Amplitude Modulation Gain Signal multiplication. **Amplifier** Converts input signal to output. IC Integrated Circuit. The positive terminal of a **PC Board** Printed Circuit Board. Anode diode. **Potentiometer** Three-terminal variable **Antenna** Any device that either radiates resistor, volume control. a signal or pulls in a signal. **Power Supply** An electronic circuit that **Baffle** Used to ensure positive airflow. produces the necessary power for another circuit. Capacitor An electronic component that has ability to store a charge Resistor An electronic component that and block DC current. obstructs (resists) the flow of electricity. Cathode The negative terminal of a diode. Speaker An electronic device that turn electric impulses into sound. Coil A component with inductive reactance. **Transistor** A semiconductor component that can be used to amplify Current Electrical flow. signals, electronic or as switches. Diode An electronic component that changes alternating current to direct current.

Elenco® Electronics, Inc.

150 Carpenter Avenue Wheeling, IL 60090 (847) 541-3800

Website: www.elenco.com e-mail: elenco@elenco.com