

Digital Storage Oscilloscope

GDS-2000 Series

USER MANUAL

GW INSTRUMENT PART NO. 82DS-22040MB1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTRUMENT

This manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongxing Rd., Tucheng City, Taipei County 236, Taiwan.

Table of Contents

SAFETY INSTRUCTIONS	5
GETTING STARTED	9
GDS-2000 Series Overview	10
Appearance	13
Set Up	21
QUICK REFERENCE	25
Menu Tree / Operation Shortcuts	26
Default Settings	44
Built-in Help	45
MEASUREMENT	46
Basic Measurement	47
Automatic Measurement	54
Cursor Measurement	59
Math Operation	63
Go-NoGo Test	68
Program	77
CONFIGURATION	82
Acquisition	84
Display	90
Horizontal View	94
Vertical View (Channel)	101
Trigger	105
System Info / Language / Clock	115
SAVE/RECALL	118
File Format/Utility	119
Quick Save (HardCopy)	125
Save	127
Recall	136
PRINT OUT	145
REMOTE CONTROL CONFIG	148
Interface Configuration	149
BATTERY OPERATION	155
MAINTENANCE	157
Vertical Resolution Calibration	157
Probe Compensation	158
FAQ	160
APPENDIX	163
Fuse Replacement	163
GPIB Module Installation	164
GDS-2000 Specification	165
Probe Specification	168
Declaration of Conformity	169
INDEX	170

SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating GDS-2000 and when keeping it in storage. Read the following before any operation to insure your safety and to keep the best condition for GDS-2000.

Safety Symbols

These safety symbols may appear in this manual or on GDS-2000.

 **WARNING**

Warning: Identifies conditions or practices that could result in injury or loss of life.

 **CAUTION**

Caution: Identifies conditions or practices that could result in damage to GDS-2000 or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal

Safety Guidelines

General Guideline



- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place any heavy object on GDS-2000.
- Avoid severe impacts or rough handling that leads to damaging GDS-2000.
- Do not discharge static electricity to GDS-2000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at power source and building installation site (Note below).
- Do not disassemble GDS-2000 unless you are qualified.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. GDS-2000 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply

- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz



- The power supply voltage should not fluctuate more than 10%.
- Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.

Fuse

- Fuse type: T2A/250V
- Make sure the correct type of fuse is installed before power up.
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before fuse replacement.
- Make sure the cause of fuse blowout is fixed before fuse replacement.

! WARNING

Cleaning GDS-2000

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemical containing harsh material such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. GDS-2000 falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

- Location: Indoor
- Relative Humidity: < 85%
- Temperature: 0°C to 50°C

Power cord for the United Kingdom

When using GDS-2000 in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons

! WARNING: THIS APPLIANCE MUST BE EARTHED
IMPORTANT: The wires in this lead are coloured in accordance with the following code:

- Green/ Yellow: Earth
- Blue: Neutral
- Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the colours marking identified in your plug/appliance, proceed as follows:
 The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with the letter E or by the earth symbol or coloured Green or Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.
 The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.
 If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.
 Any moulded mains connector that requires removal /replacement must be destroyed by removal of any fuse & fuse carrier and disposed of immediately, as a plug with bared wires is hazardous if a engaged in live socket. Any re-wiring must be carried out in accordance with the information detailed on this label.

GETTING STARTED

This chapter describes GDS-2000 in a nutshell, including its main features and front / rear panel introduction. After going through the overview, follow the Set Up section to properly set up operation environment.



GDS-2000 series overview	Series lineup	10
	Main Features	11
	Package Contents	12
Appearance	GDS-2064/2104/2204 Front Panel	13
	GDS-2062/2102/2202 Front Panel	13
	Rear Panel	17
	Display	19
Set Up	Tilt stand	21
	Power up	22
	First Time Use	23

GDS-2000 Series Overview


Series lineup

GDS-2000 series consists of 6 models, divided into 2-channel and 4-channel versions.


Model name	Frequency bandwidth	Input channels	Ext. trigger input	Advanced delay trigger
GDS-2062	60MHz	2	Yes	Yes
GDS-2102	100MHz	2	Yes	Yes
GDS-2202	200MHz	2	Yes	Yes
GDS-2064	60MHz	4	No	No
GDS-2104	100MHz	4	No	No
GDS-2204	200MHz	4	No	No

The differences between 2 and 4 channel model appearance are in the horizontal key, trigger key, variable knob, and external trigger input layout.

2-Channel model

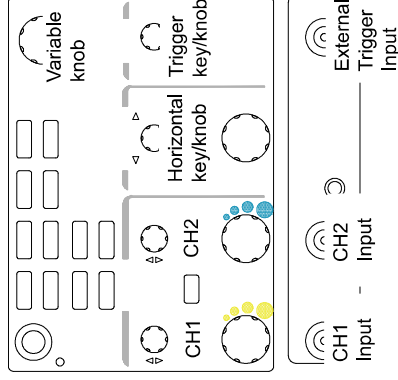

4-Channel model

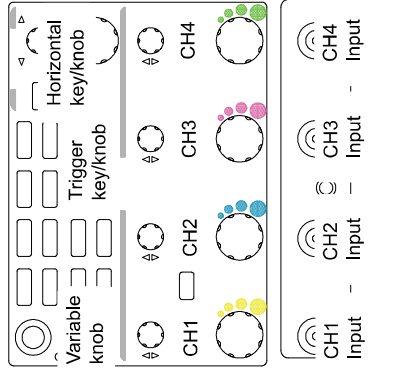


Main Features

-
- | | |
|--------------------|---|
| Performance | <ul style="list-style-type: none">• High sampling rate: up to 1GS/S real-time, 25GS/s equivalent-time• Deep memory: 25k points record length• Minimum 10ns peak detection |
| Feature | <ul style="list-style-type: none">• Wide selection range: 60MHz to 200MHz bandwidth, 2 or 4 channels• Powerful display: 5.6 in. color TFT, wide viewing angle, 8x12 divisions waveform support• Battery operation• Automatic measurements: maximum 27 types• FFT analysis• Triggers: Edge, Video, Pulse Width• Advanced Delay trigger (for 2CH model only)• Program and play mode• Color printout of display contents• Go-No Go test• Built-in Help |
| Interface | <ul style="list-style-type: none">• USB host port: front and rear panel, to printers and storage devices• USB slave port, RS-232C port, GPIB port (option): for remote control• USB slave port for PC software connection• Calibration output• Go-No Go output• External trigger input (for 2CH model only) |

Package Contents

Check the contents before using GDS-2000.

Opening the box

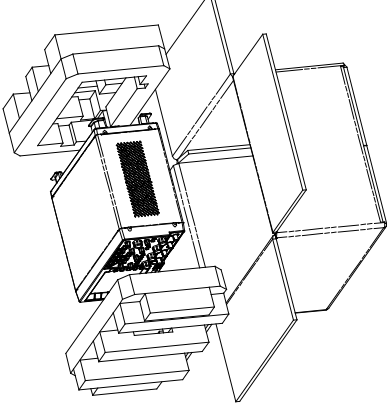


Contents	<ul style="list-style-type: none">• Main unit• Probe set<ul style="list-style-type: none">GDS-2062: GTP-060A x 2GDS-2064: GTP-060A x 4GDS-2102: GTP-100A x 2GDS-2104: GTP-100A x 4GDS-2202: GTP-250A x 2GDS-2204: GTP-250A x 4• Power cord• User manual (this document)
-----------------	---

Note


- For detailed specification of probe, see page168.
- Program manual, PC software, and USB driver are downloadable from GWInstek website. Visit www.gwinstek.com.tw, GDS-2000 corner.

Appearance

GDS-2064/2104/2204 Front Panel

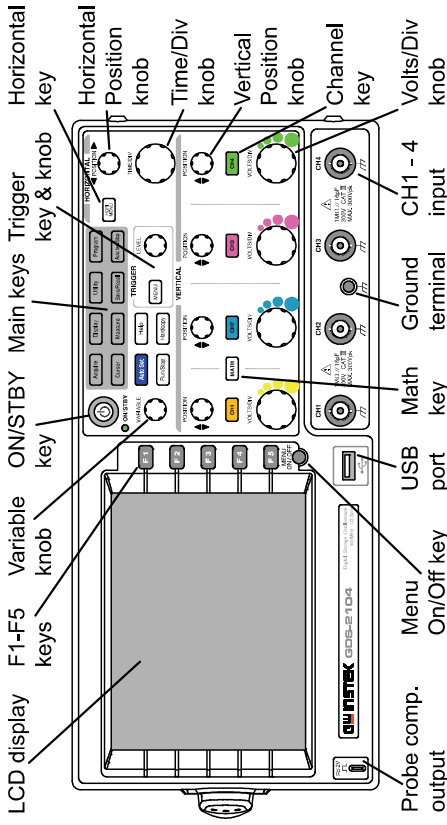

GDS-2062/2102/2202 Front Panel

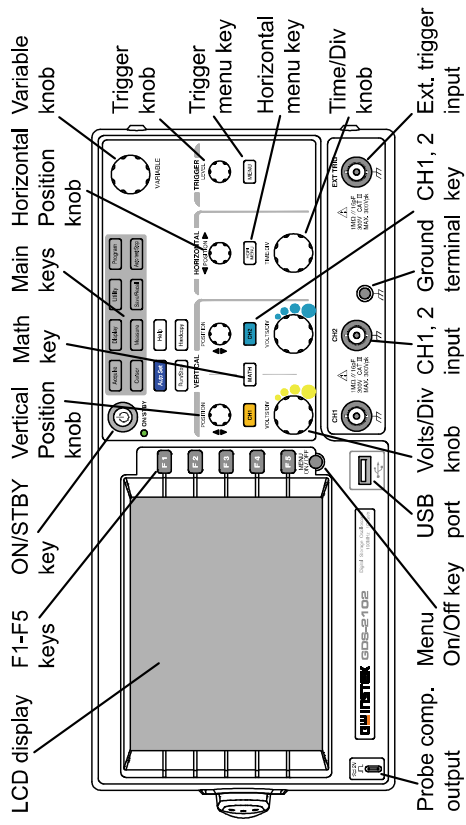

LCD display TFT color, 320 x 234 resolution, wide angle view LCD display.


F1 ~ F5 function keys



Activates the functions which appear on the left side of the LCD display.

Variable knob

VARIABLE



Increases/decreases value or moves to the next/previous parameter.

On/Standby key



Switches between the power On state (green indicator) and standby state (red indicator). For power up sequence, see page22.

Acquire key



Configures acquisition mode (page84).

Display key



Configures display settings (page90).

Utility key




Configures or shows hardcopy (page125), printer configuration (page145), interface (page149), system info (page115), date/time (page116), menu language (page115), Go-No Go (page68), calibration (page157), and probe compensation (page158).

Hardcopy key








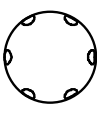

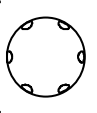
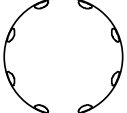










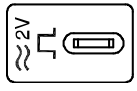
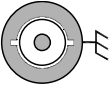
Prints out display image (page145) or transfers data to USB flash drive (page125).

Program key + Auto test key

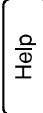


Edits, runs, and stops program operation (page77).

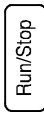
Cursor key		Configures and runs cursor measurements (page59).
Measure key		Configures and runs automatic measurements (page54).
Help key		Shows Help contents on the LCD display (page45).
Save/Recall key		Saves and recalls waveform, image, and panel setup (page118).
Auto Set key		Finds signals and sets the appropriate horizontal / vertical / trigger settings (page48).
Run/Stop key		Freezes (Stop) or continues (Run) signal acquisition (page49).
Trigger menu key		Configures trigger settings (page105).
Trigger knob	LEVEL 	Sets trigger level (page105).
Horizontal menu key		Configures horizontal view (page94).
Horizontal position knob	POSITION 	Sets the horizontal position of waveforms (page94).
Time/Div knob	TIME/DIV 	Selects the horizontal scale (page95).

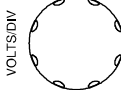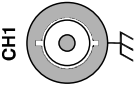Vertical position knob	POSITION 	Sets the vertical position of waveforms (page101).
Channel menu key		Configures the vertical scale and coupling mode for each channel (page101).
Volts/Div knob	VOLTS/DIV 	Selects the vertical scale (page101).
Input terminal	CH1 	Accepts input signals. Input impedance: $1M\Omega \pm 2\%$.
Ground terminal		Accepts the DUT ground lead for common ground.
Math key		Configures and runs math operation (page63).
USB host port		TypeA, 1.1/2.0 compatible. Prints out display image (page145) or transfers data (page118).
Menu On/Off key	MENU ON/OFF 	Shows or hides menu in the LCD display (page93).
Probe compensation output		Outputs 2Vp-p, square signal for probe compensation (page158) or demonstration. Can be used for generic purpose (page52) as well.
External trigger input	EXT TRIG 	For 2ch model only. Accepts external trigger signal (page105). Input impedance: $1M\Omega \pm 2\%$.

Rear Panel

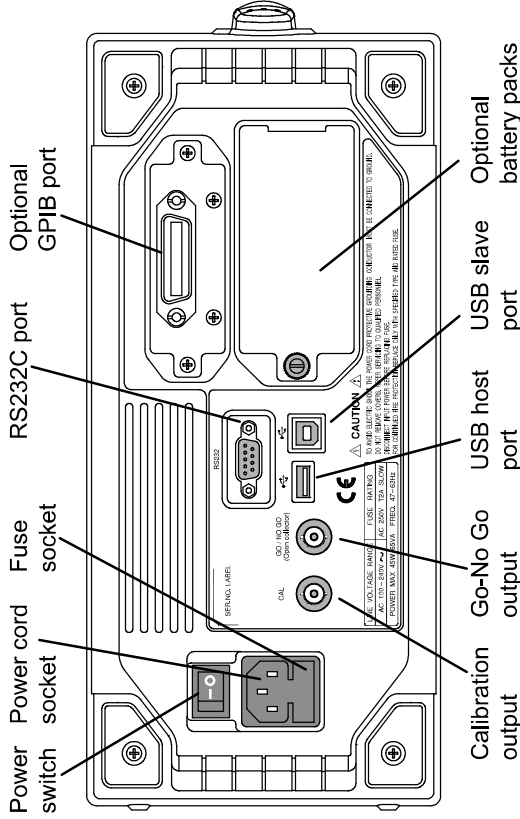

Power switch

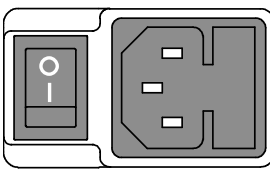

Power switch turns the main power On () / Off ().

Power cord socket

Power cord socket accepts AC mains, 100 ~ 240V, 50/60Hz.


Fuse socket

Fuse socket holds AC main fuse, T2A/250V.

For power up sequence, see page22.


For fuse replacement procedure, see page163.

RS232C port



Accepts DB-9 RS-232C connector for remote control (page150).


GPIB port (optional)



Accepts 24 pin male GPIB connector for remote control (page152).


Battery packs (optional) Holds 2 packs of Li-Ion battery for portable usage (page155).

USB slave port



Accepts typeB connector for remote control (page149) or PC software connection. USB 1.1/2.0 full speed compatible.


USB host port



Accepts typeA connector for display image printout (page145) or data transfer (page118). Simultaneous use with the front panel host port is not allowed. TypeA, 1.1/2.0 full speed compatible.

Go-No Go output


GO / NO GO (Open collector)



Outputs Go-No Go test result (page68) as 10us pulse signal.

Calibration output

CAL



Outputs the signal for vertical scale accuracy calibration (page157).

Display

The screenshot shows the oscilloscope's main display with four channels of waveforms. The top status bar includes: Power source (AC main), Interface (remote connection), Date/Time (25-Nov-06 13:56), Memory Bar (13:56), Trigger Acquisition status (Trig'd), and CH 1 settings (Coupling: ---, Invert: Off, BW Limit: Off, Probe: x1). The bottom status bar shows: MAIN CH1 (500mV), CH2 (500mV), CH3 (500mV), CH4 (500mV), Timebase (250us), Trigger configuration (CH1 EDGE), Waveform frequency (999.978Hz), and Waveform frequency (999.978Hz).

Waveforms

Shows input signal waveforms.
 Channel 1: Yellow
 Channel 2: Blue
 Channel 3: Pink
 Channel 4: Green

Power source

AC main is the source.
 Battery (page155) is the source.
 AC main is the source: battery is installed as well.

Image recall

The "R" indicator shows that the display shows pre-recorded image, not signal waveform.

Interface

Shows the active interface for remote connection (page148) and PC software connection.

- USB
- RS-232C
- GPIB (optional)

Date/Time

07-Jan-06 14:53
 Current date and time (page116).

Memory bar

The ratio and the position of the displayed waveform compared with the internal memory (page94).

Trigger status

Trig'd Triggered.
Trig? Not triggered, display not updated.
Auto Not triggered, display updated.
STOP Trigger stopped. Also appears in Run/Stop (page49).

Acquisition mode

Normal mode
 Peak detect mode
 Average mode

Input signal frequency

999.979Hz
 <20Hz
 Shows the input signal frequency.
 Indicates the frequency is less than 20Hz (lower frequency limit).

Trigger configuration

CH1 EDGE Trigger source, type, trigger source, polarity.
CH1 VIDEO P slope. (Video trigger)

Channel status


For trigger details, see page105.
CH1 500mV Channel 1, bw limit On, DC coupling, 500mV/Div
CH1 ~ 500mV Channel 1, bw limit Off, AC coupling, 500mV/Div

For channel details, see page101.


Set Up

Tilt stand

Low angle

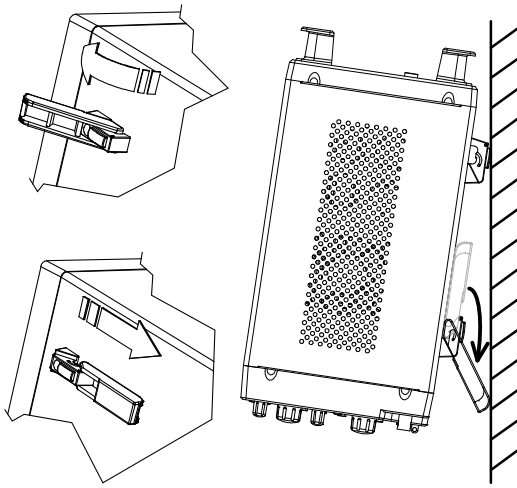


High angle

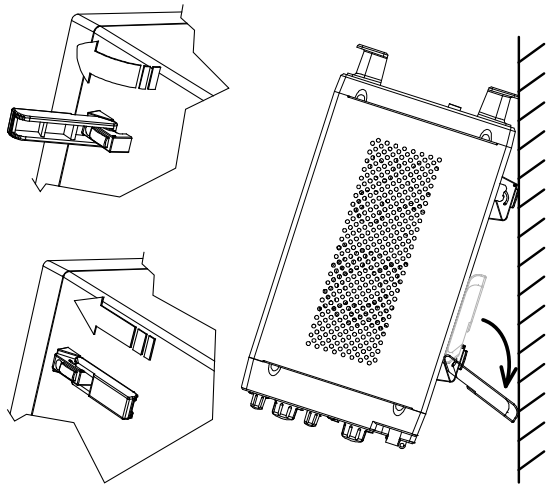


Power up

Step

1. Connect the power cord to the rear panel socket. (No need when using the battery).

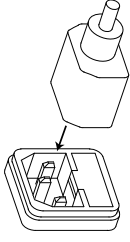

2. Turn On the main power switch. **I** : On, **O** : Off.





3. The ON/STBY indicator on the front panel turns red.



4. Press the ON/STBY key. The indicator turns green and the display becomes active in 6 ~ 8 seconds.



5. The power icon on the upper left corner of the display shows the power source. When both AC mains and battery are available, AC mains is automatically selected.



AC mains (battery also installed)



Note


GDS-2000 recovers the state right before the power OFF. The default setting can be recovered by pressing the Save/Recall key → F1 (Default Setup). For details, see page136.

First Time Use

Background This section describes how to connect a signal, adjust the scale, and compensate the probe. Before operating GDS-2000 in a new environment, run these steps to make sure the instrument is functionally stable and that you are comfortable operating it.


1. Power On Follow the procedure on the previous page.

2. Reset system
 Reset the system by recalling the factory setting. Press the Save/Recall key, then F1 (Default Setup). For factory setting details, see page44.

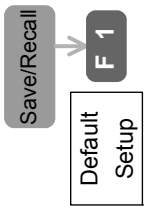


2. Connect probe
 Connect the probe to Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).

Set the probe attenuation to x10.

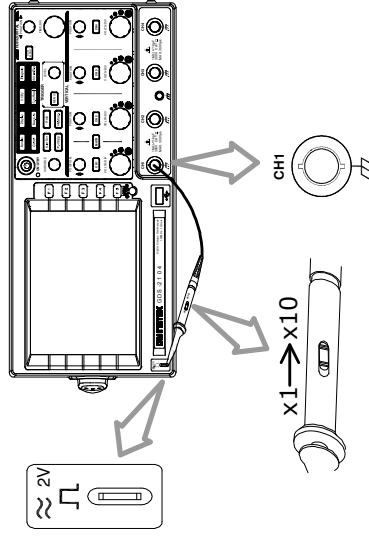


3. Capture signal (Auto Set)
 Press the Auto Set key. A square waveform appears on the center of the waveform. For Auto Set details, see page48.

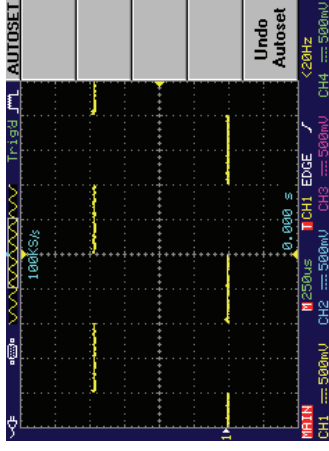


4. Select vector waveform

Press the Display key, then F1 (Type) twice to select the vector waveform.

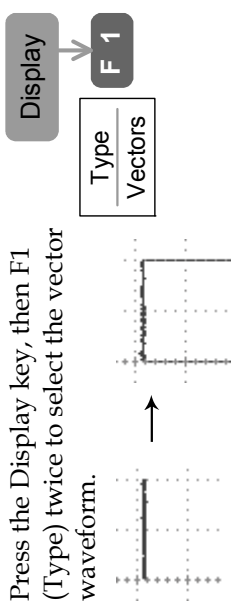

5. Compensate probe

Turn the adjustment point on the probe to make the square waveform edge flat.

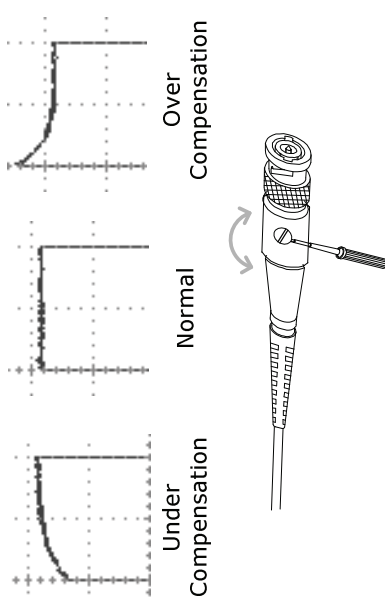

6. Start operation Continue with the other operations.

Measurement: page46 Configuration: page82

Remote control: page148

QUICK REFERENCE

This chapter describes GDS-2000 menu tree, shortcuts to major operations, built-in Help access, and default factory settings. Use them as a handy reference to get a quick access to the functionality.


Menu tree / shortcut	26	
Convention	26	
Acquire key	26	
Auto Set key	26	
Auto test/Stop key	27	
CH1 ~ 4 key	27	
Cursor key	27	
Display key	28	
Hardcopy key	28	
Help key	28	
Horizontal menu key	28	
Math key (1/2)	29	
Measure key (1/2)	30	
Program key (1/2)	31	
Run/Stop key	31	
Save/Recall key (1/9)	32	
Trigger key (1/5)	36	
Utility key (1/9)	38	
Default setup	Default Settings	44
Help	Built-in Help	45

Menu Tree / Operation Shortcuts


Convention

- F1 = Press F1
- F1 ⇐ = Press F1 repeatedly
- F1 ~ F4 = Select one from F1 to F4 and press it
- F1 → VAR = Press F1, then use the Variable knob
- Auto Set = Press the function key itself (AutoSet in this case)

Acquire key

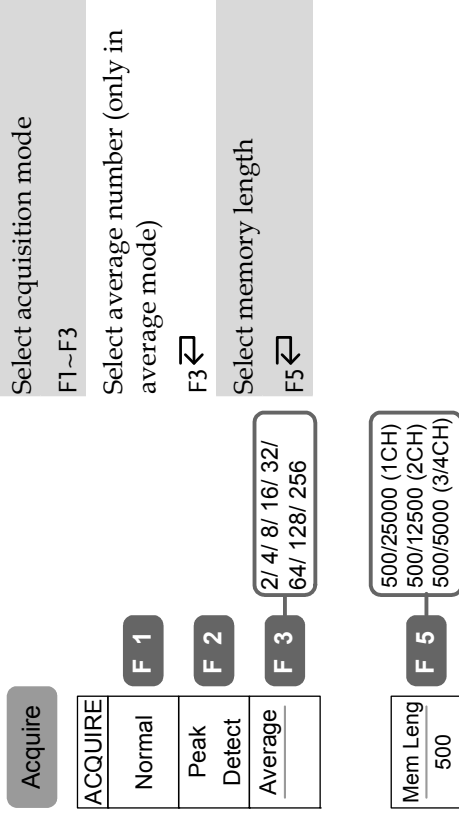

Auto Set key

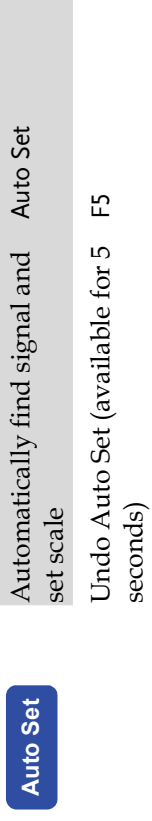

Auto test/Stop key

→ See Program key (page31)

Auto test/Stop

CH1 ~ 4 key

CH1

Coupling	~ / /
Invert	On/ Off
BW Limit	On/ Off
Probe	x1/x10/ x100

Select coupling mode
F1 ↵

Turn waveform invert On/Off
F2 ↵

Turn bandwidth limit On/Off
F3 ↵

Select probe attenuation factor
F4 ↵

Display key

Display

DISPLAY	
Type	Vectors/ Dots
Dots	On/ Off
Accumulate	Off
Refresh	
Contrast	

Select waveform display type
F1 ↵

Waveform accumulation On/Off
F2 ↵, F3 (display refresh when On)

Set display contrast
F4 → VAR

Select display grid
F5 ↵

Hardcopy key

Hardcopy

→ See Utility key (page38)

Help key

Help

Turn help mode On/Off Help

Horizontal menu key

HORI MENU

Hor.MENU	
Main	F 1
Window	F 2
Window Zoom	F 3
Roll	F 4
XY	F 5

Select main (default) display
F1

Select Window mode and zoom
F2 → TIME/DIV , F3

Select windows roll mode
F4

Select XY mode
F5

Auto test/Stop key

→ See Program key (page31)

Auto test/Stop

CH1 ~ 4 key

CH1

Coupling	~ / /
Invert	On/ Off
BW Limit	On/ Off
Probe	x1/x10/ x100

Select coupling mode
F1 ↵

Turn waveform invert On/Off
F2 ↵

Turn bandwidth limit On/Off
F3 ↵

Select probe attenuation factor
F4 ↵

Cursor key

Cursor

CURSOR	
Source	(4CH) CH1/ 2/ 3/ 4/ MATH (2CH) CH1/ 2/ MATH
Horizontal	
Vertical	
	T1: 236.0us T2: 160.0us Δ: 396.0us f : 2.525kHz
	V1: 1.54V V2: 460mV Δ : 2.00V

Select cursor source channel
F1 ↵

Select active horizontal cursor
F2 ↵

Select active vertical cursor
F3 ↵

Math key (1/2)

MATH		Select math operation (+ / - / x)	F1 ↵
MATH	Operation	Select channel combination	F2 ↵
	+		
	CH1+CH2	Set result position	F4 → VAR ⌚
	(4CH) CH1+CH2/ CH3+CH4 (2CH) CH1+CH2	Math result vertical scale	F5 → VOLTS/DIV ⌚
Position	0.00 Div		
Unit/Div	2V		
	F 4		
	-12div ~ +12div		
	F 5		

Math key (2/2)

MATH		Select math operation type (FFT)	F1 ↵
MATH	Operation	Select FFT source channel	F2 ↵
	FFT		
	Source	Select FFT window	F3 ↵
	CH1		
		Select FFT result position	F4 → VAR ⌚
	(4CH) CH1/2/3/4 (2CH) CH1/2	Select vertical scale	F5 ↵
	Flattop/ Rectangular/ Blackman/ Hanning		
	F 4		
	-12div ~ +12div		
	F 5		
	20/10/5/2/1 dB /RMS Voltage		

Measure key (1/2)

Measure		Measure
MEASURE	Vpp	MEASURE
	1:204mV	Source 1
	2:24.0mV	CH 1
	Vavg	Source 2
	1:99.3mV	CH 2
	2:4.28mV	
	Frequency	Voltage
	1:1.000kHz	Vpp
	2:1.500kHz	
	DutyCycle	
	1:50.00%	
	2:45.00%	
	RiseTime	
	1:7.837us	
	2:8.136us	

F 1 → (4CH) CH1/2/3/4
 (2CH) CH1/2/

F 2 → (4CH) CH1/2/3/4
 (2CH) CH1/2/

F 3 → Voltage/Time/Delay

F 4 → [Waveform icon]

F 5 → Previous Menu

Select source channel 1 F1 ↵

Select source channel 2 F2 ↵

Select measurement type F3 ↵

Select measurement item VAR ⌚ or F4 ↵

Go back to previous menu F5

Measure key (2/2)

Measure		Measure
MEASURE	Vpp	MEASURE
	1:204mV	Source 1
	2:24.0mV	CH 1
	Vavg	Source 2
	1:99.3mV	CH 2
	2:4.28mV	
	Frequency	Voltage
	1:1.000kHz	Vpp
	2:1.500kHz	
	DutyCycle	
	1:50.00%	
	2:45.00%	
	RiseTime	
	1:7.837us	
	2:8.136us	

F 1 → DISPLAY ALL

F 2 → CH1

F 3 → CH2

F 4 → CH3 (4CH model)

F 5 → CH4 (4CH model)

F 1 → CH1

F 2 → CH2

F 3 → CH3 (4CH model)

F 4 → CH4 (4CH model)

F 5 → OFF

Switch between Individual mode and Display All mode Measure ↵

Select channel for Display All mode F1 ~ F4

Clear Display All mode F5 ↵

Program key (1/2)

Program	F 1 ←	→ F 1
PROGRAM	▲ Edit	1 ~ 20
Play	▶	Menu/Time/Setup
Step	01.	
Item		
Menu		
Save	F 5	

Select Program Edit mode
F1 ↵

Select program step
F2 → VAR ○

Select edit item
F3 ↵

Save edited program
F5

Program key (2/2)

Program	F 1 ←	→ F 1
PROGRAM	▲ Edit	1 ~ 99
Play	▶	1 ~ 20 (From ≤ To)
Cycle	99	
From: 1		
To: 4		
Start	F 5	

Select Program Play mode
F1 ↵

Select program loop count
F2 → VAR ○

Select first step (From:)
F3 ↵ → VAR ○

Select last step (To:)
F3 ↵ → VAR ○

Start / stop program running
F5 (start), Auto test/Stop (stop)

Run/Stop key

Run/Stop	Freeze/unfreeze signal acquisition	Run/Stop
----------	------------------------------------	----------

Save/Recall key (1/9)

Save/Recall	F 1	→	SAVE/REC	F 1	→
Default Setup			Save Image		To Save Image
Display Refs.	F 2	→	Save All	F 2	→
Save Setup	F 3	→	Recall Setup	F 3	→
Save Waveform	F 4	→	Recall Waveform	F 4	→
More	F 5	→	Recall Image	F 5	→

Save/Recall default setup
F1

Save/Recall key (2/9)

Display Refs.	F 1	←	SAVE/REC	F 1	←
Display Refs.			Save Image		To Save Image
Ref.A Off	F 2	On/Off	Save All	F 2	→
Ref.B Off	F 3	On/Off	Recall Setup	F 3	→
Ref.C Off	F 4	On/Off	Recall Waveform	F 4	→
Ref.D Off	F 5	On/Off	Recall Image	F 5	→

Select Display Refs menu
F1 ↵

Turn ref. waveform A On/Off
F2 ↵

Turn ref. waveform B On/Off
F3 ↵

Turn ref. waveform C On/Off
F4 ↵

Turn ref. waveform D On/Off
F5 ↵

Save/Recall key (3/9)

Save Setup

Save/Recall

Save Setup	F1
------------	----

Select Save Setup menu
F1

Select destination
F3 → VAR

Save setup
F4

Go to USB flash drive contents edit mode
F5

Destination USB	F3	Memory/USB
Save	F4	
File Utilities	F5	(USB only) To File Utilities

Save/Recall key (5/9)

Save All

Save/Recall

Save All	F1
----------	----

Select Save All menu
F1

Turn ink saver On/Off
F2

Select destination
F3 → VAR

Save all
F4

Go to USB flash drive contents edit mode
F5

Ink Saver Off	F2	On/Off
Destination USB	F3	
Save	F4	
File Utilities	F5	(USB only) To File Utilities

Save/Recall key (4/9)

Save Waveform

Save/Recall

Save Waveform	F1	(4CH) CH1/2/3/4
Source	F2	Ref A/B/C/D (2CH) CH1/2 Ref A/B/C/D
Destination USB	F3	Memory/USB/ Refs.
Save	F4	
File Utilities	F5	(USB only) To File Utilities

Select Save Waveform menu
F1

Select waveform source
F2

Select waveform destination
F3 → VAR

Save waveform
F4

Go to USB flash drive contents edit mode
F5

Save/Recall key (6/9)

Recall Setup

Save/Recall

Recall Setup	F1	
Source USB	F2	USB/Memory

Select Recall Setup menu
F1

Select setup source
F2 → VAR

Recall setup
F4

Go to USB flash drive contents edit mode
F5

Recall	F4	
File Utilities	F5	(USB only) To File Utilities

Save/Recall key (7/9)

Recall Waveform

Save/Recall	
Recall Waveform	F1
Source USB	F2
Destination	F3
Recall	F4
File Utilities	F5

F1 → Recall Waveform menu
 F2 → Select waveform source
 F3 → Select waveform destination
 F4 → Recall waveform
 F5 → Go to USB flash drive contents edit mode
 (USB only) To File Utilities

Save/Recall key (9/9)

File Utilities

Save/Recall	
FILE UTILS	F1
Select	F2
New Folder	F3
Rename	F4
Delete	F5
Previous Menu	

F1 → Select file/folder or enter into sub folder
 F2 → Create new folder or rename folder/file
 F3 → F2, F3 (Enter new folder or rename menu)
 F4 → VAR → F1 (Enter character)
 F5 → F2 (Backspace)
 F6 → F4 (Save new folder)
 F7 → F5 (Go back to previous menu)
 F8 → Delete folder/file
 F9 → F4

Save/Recall key (8/9)

Recall Image

Save/Recall	
Recall Image	F1
Source USB	F2
Ref Image On	F3
Recall	F4
File Utilities	F5

F1 → Select Recall Image menu
 F2 → Select image source
 F3 → Show or recall image
 F4 → Recall image
 F5 → Go to USB flash drive contents edit mode
 To File Utilities

Trigger key (1/5)

Video

MENU	
TRIGGER	F1
Type Video	F2
Source CH1	F3
Standard NTSC	F4
Polarity	F5
Line	

F1 → (4CH) CH1/2/3/4 (2CH) CH1/2
 F2 → NTSC/SECAM/PAL
 F3 → Field 1/ Field 2 1~263 (NTSC) 1~313 (SECAM/PAL)

Trigger key (2/5)

Edge/Pulse

MENU	
TRIGGER	
Type	Edge/Pulse
Pulse	
Source	(4CH) CH1/2/3/4/Line (2CH) CH1/2/Ext/Line
CH1	
Mode	Auto/Normal/ Single
Auto	
When <	>/ </ =/ ≠
20.0ns	20ns~200us
Slope / Coupling	To Slope/Coupling

F 1 → Select Edge/Pulse trigger type
F 2 → Select trigger source
F 3 → Select trigger mode
F 4 → Select pulse trigger condition and pulse width
F 5 → Go to slope/coupling menu

Trigger key (4/5)

Slope/Coupling

MENU	
TRIGGER	
Slope	↕ / ↖
Coupling	~ / ---
Rejection	Off <input type="checkbox"/>
Off	LF/ HF/ Off
Noise Rej	Off <input type="checkbox"/>
Off	On/ Off
Previous Menu	

F 1 → Select trigger slope type
F 2 → Select trigger coupling mode
F 3 → Select Frequency Rejection
F 4 → Turn Noise Rejection On/Off
F 5 → Go back to previous menu

Trigger key (3/5)

(2CH Only)

MENU	
TRIGGER	
Type	Delay
Delay	
By Time	100ns
100ns	
By Event	2
2	
Ext:	TTL: 1.48V/ ECL: -1.35V User: -12~+12V
TTL	
Slope/ Coupling	To Slope/Coupling

F 1 → Select Delay trigger type
F 2 → Select time delay mode and delay length
F 3 → Select event delay mode and event count
F 4 → Select external trigger type and adjust trigger level (User type)
F 5 → Go to slope/coupling menu





Trigger key (5/5)

Press the MENU key twice

MENU	
TRIGGER	
Holdoff	40.0ns
40.0ns	
Set to	Minimum
Minimum	
Auto Level	Off <input type="checkbox"/>
Off	On/ Off






F 1 → Set Holdoff time
F 2 → Set Holdoff time to minimum
F 5 → Turn Auto Level trigger On/Off

Utility key (1/9)

Utility	
UTILITY Hardcopy Menu	F1 → To Hardcopy menu
UTILITY Interface Menu	F2 → To Interface menu
UTILITY Off	F3 →  /  / Off
UTILITY Language English	F4 → English/Chinese(S) Chinese(T)/Spanish Korean/ etc
UTILITY More	F5 →  ←  →


Go to Hardcopy menu	F1
Go to Interface menu	F2
Select buzzer sound	F3
Select language	F4
Go to other menu	F5

Utility key (2/9)

Utility	
UTILITY Self CAL Menu	F1 →  Vertical
UTILITY System Info.	F2
UTILITY Go-NoGo Menu	F3 → To Go-NoGo menu
UTILITY NoGoWhen	F4 →  / 
UTILITY More	F5 →  ←  →

Start Vertical calibration	F1 → F1
Show system information	F2
Go to Go-NoGo menu	F3
Select NoGo condition	F4
Go to other menu	F5

Utility key (3/9)

Hardcopy	
UTILITY	Hardcopy
H-COPY Function	F1 →  SaveImage/ SaveAll/ Printer
Ink Saver Off	F2 → On/ Off
Gray Portrait	F3 → (Printer only) Color Portrait/ Gray Portrait
Ratio 50%	F4 → (Printer only) 5 ~ 75
Previous Menu	F5

Select Hardcopy function	F1
Turn Ink Saver On/Off	F2
Select printout color (only in printout mode)	F3
Select printout ratio (only in printout mode)	F4
Run Hardcopy	Hardcopy

Utility key (4/9)

Interface	
UTILITY	Interface
Type RS232	F1 → RS232/ USB/ GPIB
Address 1	F2 → (GPIB only) 1 ~ 30
Baud Rate 9600	F2 → (RS232C only) 2400/ 4800/ 9600/ 19200/ 38400
Stop Bit 2	F3 → (RS232C only) 1/ 2
Parity None	F4 → (RS232C only) Odd/ Even/ None
Previous Menu	F5

Select interface	F1
Select GPIB address	F2 → VAR
Select RS-232C baud rate	F2
Select RS-232C stop bit	F3
Select RS-232C parity	F4

Utility key (5/9)

Go-NoGo	
Utility	Go to Go-NoGo template menu F1
Go-NoGo Template Edit	Select Go-NoGo source channel F2
Source CH1	Select violating condition F3
Violating Stop	Start/Stop Go-NoGo test F4
Go-NoGo Off	Go-NoGo test result F5
Ratio: 0	

F 1	To Go-NoGo Template menu
F 2	(4CH) CH1/ 2/ 3/ 4 (2CH) CH1/ 2
F 3	STOP / STOP+ Continue / Cont. +
F 4	On/ Off
F 5	

Utility key (7/9)

Utility	Go to Probe Compensation menu F1
UTILITY ProbeComp Menu	Go to Time Set menu F2
Time Set Menu	Go to other menu F5

F 1	To Probe menu
F 2	To Time set menu
F 5	

Utility key (6/9)

Go-NoGo Template	
Utility	Select template F1
Template Max	Select template source F2
Source RefA	Select template position or tolerance F3
Source CH1	Save and create template F4
Position 3.00 Div	Go to previous menu F5
Tolerance 0.4%	
Save & Create	
Previous Menu	

F 1	Max/ Min/Auto (Max/Min template) Max: Ref A/ W1~20 Min: Ref B/ W1~20
F 2	(Auto template) (4CH) CH1/ 2/ 3/ 4 (2CH) CH1/ 2
F 3	(Max/Min template) -12Div ~ +12Div
F 4	(Auto template) 0.4% ~ 40% 0.04div ~ 4.0div
F 5	

Utility key (8/9)

Probe compensation	
Utility	Select probe compensation signal F1
ProbeComp Wave Type	Set frequency for square wave F2
Frequency 1 K	Set duty cycle for square wave F3
Duty Cycle 50%	Default compensation signal frequency F4
Default 1k	Go to previous menu F5
Previous Menu	

F 1	/ /
F 2	(only) 1k ~ 100k
F 3	(only) 5% ~ 95%
F 4	
F 5	

Utility key (9/9)

Time set

Utility	
TIME SET	
Date	F 1
Time	F 1
Day 1	F 2
Hour 0	F 2
Save	F 4
Previous Menu	F 5

(Day/Month/Year)
Day: 1 ~ 31
Year: 2000 ~ 2037
Month: 1 ~ 12

(Hour/Minute)
Hour: 0 ~ 23
Minute: 0 ~ 59

Select date / time setting
F1 ←

Select day / month / year
F2 ← → VAR

Select hour / minute
F2 ← → VAR

Save date / time setting
F4

Go to previous menu
F5

Default Settings


Here is the factory installed panel setting which appears when pressing the Save/Recall key → F1 (Default Setup).


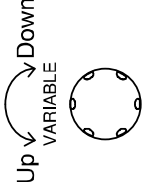
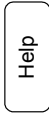


Acquisition	Mode: Normal	Memory length: 500
Channel	Scale: 2V/Div Coupling: DC BW limit: Off	CH1: On, CH2/3/4: Off Invert: Off Probe attenuation: x1
Cursor	Source: CH1 Vertical: None	Horizontal: None
Display	Accumulate: Off	Graticule:
Go-NoGo	Go-No: Off Violating: Stop	Source: CH1
Horizontal	Scale: 2.5us/Div	Mode: Main
Math	Type: + (Add) Position: 0.00 Div Math Off	Channel: CH1+CH2 Unit/Div: 2V
Measure	Source1, 2: CH1, CH2	Type: VPP, Avg, Freq, Duty Cycle, Risettime
Program	Mode: Edit	Step: 1
Trigger	Type: Edge Mode: Auto Coupling: DC Noise Rejection: Off	Source: Channel1 Slope: Rejection: Off
Utility	Square wave probe, 1k, 50% duty cycle Sound: Off	Hardcopy: save image, ink saver on GPIB, Address 8

Built-in Help

The Help key shows help contents. When a functional key is pressed, simple explanations of its major functionalities appear on the display.

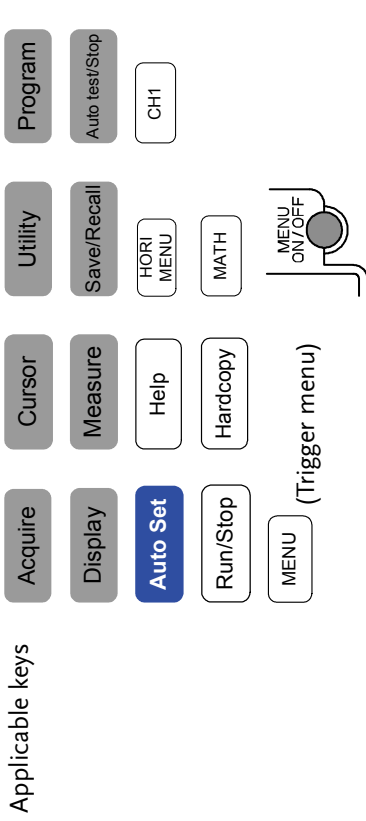

- Panel operation**
1. Press the Help key. The display changes to Help mode.
 2. Press each key to access its help contents. (example: Acquire key)
 
 3. Use the Variable knob to scroll the Help contents up and down.
 
 4. Press the Help key again to exit the Help mode.
 

MEASUREMENT



Basic measurement	Channel activation.....	47
	Auto Set.....	48
	Run/Stop.....	49
	Horizontal position/scale.....	50
	Vertical position/scale.....	51
	Probe compensation signal.....	52
Automatic measurement	Measurement items.....	54
	Individual mode.....	56
	Display All mode.....	58
Cursor measurement	Use horizontal cursor.....	59
	Use vertical cursor.....	61
Math operation	Addition/Subtraction/Multiplication.....	64
	FFT.....	66
Go-NoGo test	Edit: Buzzer sound.....	69
	Edit: NoGo when.....	69
	Edit: Source signal.....	70
	Edit: Continue or stop after NoGo.....	70
	Edit: Template (boundary).....	71
	Run Go-NoGo test.....	75
Program	Edit program.....	78
	Run program.....	80

Basic Measurement

This section describes the basic operations required in capturing and viewing the input signal. For more detailed operations, see the following chapters.

- Measurements → from page46
- Configurations → from page82

Channel activation

Activate channel	To activate an input channel, press the Channel key. The LED turns On and the input signal waveform appears on the display.	
De-activate channel	To disable the channel, press the Channel key again. If the display menu is different from the Channel menu, press twice (the first press shows the Channel menu).	
Default setup	When the default setup is recalled (Save/Recall key → F1), Channel 1 automatically turns On. Channel 2, 3, and 4 becomes Off.	
Auto Set	The Auto Set (page48) does NOT automatically activate the channels to which input signals are connected.	


Auto Set

Background


Auto Set function automatically configures the panel settings to position the input signal to the best viewing condition. GDS-2000 automatically configures the following parameters.

- Horizontal scale
- Vertical scale
- Trigger source channel

Panel operation

1. Connect the input signal to GDS-2000 and press the Auto Set key. 

2. The waveform appears in the center of the display.

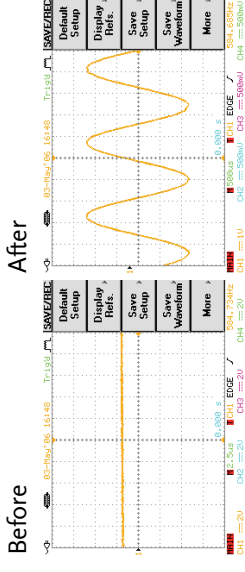

3. To undo Auto Set, press F5 (Undo). This feature is available for 5 seconds after Auto Set is activated.

Limitation

- Auto Set does not work in the following situation.
- Input signal frequency is less than 20Hz
 - Input signal amplitude is less than 30mV

Run/Stop

Background

By default, the waveform on the display is constantly updated (Run mode). Freezing the waveform by stopping signal acquisition (Stop mode) allows flexible observation and analysis. To enter the Stop mode, two methods are available: pressing the Run/Stop key or using the Single Trigger mode.

Stop mode icon When in Stop mode, the Stop icon appears at the top of the display.



Freeze waveform by Run/Stop key

1. Press the Run/Stop key once. The waveform and signal acquisition freezes. To unfreeze, press the Run/Stop key again.





Freeze waveform by Single Trigger mode

2. In the Single Trigger mode, the waveform always stays in the Stop mode, and is updated only when the Run/Stop key is pressed. For details, see page105.

Note: pressing the Run/Stop key only updates the waveform once - it does not switch to Run mode (continuous update).

(Trigger)



Waveform operation



The waveform can be moved or scaled in both Run and Stop mode, but in different manners. For details, see page94 (Horizontal position/scale) and page101 (Vertical position/scale).

Horizontal position/scale


For more detailed configuration, see page94.

Set horizontal position

The horizontal position knob moves the waveform left/right. As the waveform moves, the memory bar appears on the top of the display, indicating the portion of displayed waveform in the memory.




Stop mode In the Stop mode, the memory bar moves along with the waveform until it reaches the end of the memory.




Select horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

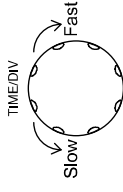


Range 1ns/Div ~ 10s/Div, 1-2-5 increment

The corresponding sampling rate appears on the upper side of the display. The timebase indicator appears on the lower side.

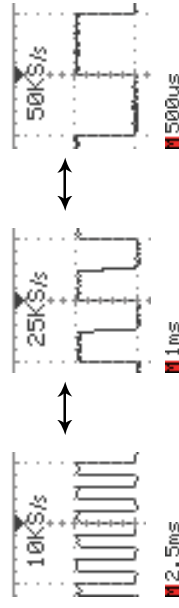

Stop mode In the Stop mode, the memory bar and waveform size changes according to the scale.




Vertical position/scale


For more detailed configuration, see page101.

Set vertical position

To move the waveform up or down, turn the vertical position knob for each channel.

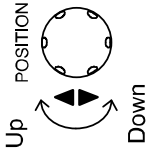


As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.



Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.


Select vertical scale

To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).

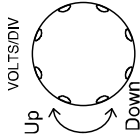

Range 2mV/Div ~ 5V/Div, 1-2-5 increment

The vertical scale indicator for each channel on the bottom left of the display changes accordingly.




Stop mode In Stop mode, the vertical scale setting can be changed but the shape of the waveform does not change until the next acquisition.

Probe compensation signal

Background

This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available. For probe compensation details, see page158.



Note that the frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purpose.

Waveform type



Square waveform for probe compensation. 1k ~ 100kHz, 5% ~ 95%.




Demonstration signal to show the effect of peak detection. See page84 for peak detection mode details.



Demonstration signal to show the effect of long memory. See page86 for memory length details.

View compensation waveform


1. Connect the probe between the compensation signal output and Channel input.

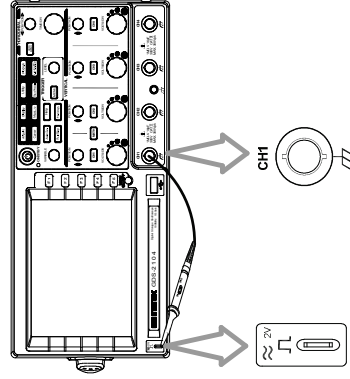

2. Press the Utility key.


Utility


3. Press F5 (More) twice.




4. Press F1 (Wave type) repeatedly to select the wave type.




5. (For square wave  only) To change the frequency, press F2 (Frequency) and use the Variable knob.

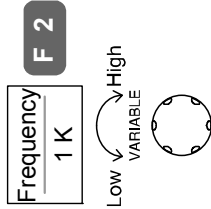

Range 1kHz ~ 100kHz

6. (For square wave  only) To change the duty cycle, press F3 (Duty Cycle) and use the Variable knob.

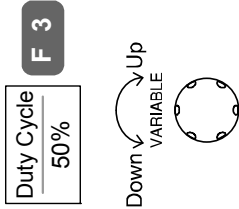

Range 5% ~ 95%

Probe compensation details, see page158.

Probe compensation

Automatic Measurement

Automatic measurement function measures and updates major items for Voltage, Time, and Delay type.

Measurement items

Overview	Voltage type	Time type	Delay type
Vpp		Frequency	FRR
Vmax		Period	FRF
Vmin		RiseTime	FFR
Vamp		FallTime	FFF
Vhi		+Width	LRR
Vlo		-Width	LRF
Vavg		DutyCycle	LFR
Vrms			LFF
ROVShoot			
FOVShoot			
RPREShoot			
FPREShoot			

Voltage measurement	Voltage type	Time type	Delay type
Vpp		Difference between positive and negative peak voltage (=Vmax - Vmin)	
Vmax		Positive peak voltage	
Vmin		Negative peak voltage	
Vamp		Difference between global high and global low voltage (=Vhi - Vlo)	
Vhi		Global high voltage	
Vlo		Global low voltage	

Vavg		Averaged voltage of the first cycle
Vrms		RMS (root mean square) voltage
ROVShoot		Rise overshoot voltage
FOVShoot		Fall overshoot voltage
RPREShoot		Rise preshoot voltage
FPREShoot		Fall preshoot voltage

Time measurement		Frequency of the waveform
		Waveform cycle time (=1/Freq)
		Rising time of the pulse (~90%)
		Falling time of the pulse (~10%)
		Positive pulse width
		Negative pulse width
		Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)

Delay measurement		FRR	Time between: Source 1 first rising edge and Source 2 first rising edge
		FRF	Time between: Source 1 first rising edge and Source 2 first falling edge


FRR		Time between: Source 1 first falling edge and Source 2 first rising edge
FFF		Time between: Source 1 first falling edge and Source 2 first falling edge
LRR		Time between: Source 1 first rising edge and Source 2 last rising edge
LRF		Time between: Source 1 first rising edge and Source 2 last falling edge
LFR		Time between: Source 1 first falling edge and Source 2 last rising edge
LFF		Time between: Source 1 first falling edge and Source 2 last falling edge

Individual mode


Individual mode shows five selected measurement items, two channels each, on the menu bar.

View measurement result

1. Press the Measure key.



2. The measurement results for two selected channels appear on the menu bar, constantly updated. Press F1 ~ F5 to change the measurement item.

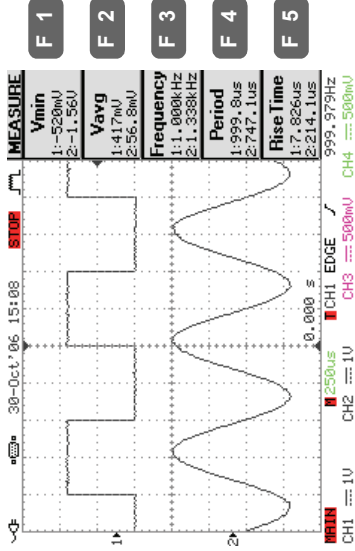

Select measurement item

3. The selection menu appears. Press F1 (Source 1) repeatedly to select the first source channel.

4. Press F2 (Source 2) repeatedly to select the second source channel.

5. Press F3 repeatedly to select the measurement type: Voltage, Time, and Delay.

6. Use the Variable knob or press F4 repeatedly to select the measurement item.

7. Press F5 (Previous Menu) to confirm the item selection and to go back to the measurement results view.

Display All mode


Display All mode shows and updates all items from Voltage and Time type measurement.

View measurement result

1. Press the Measure key twice.

2. Press the channel for which the measurement results need to be observed.

3. The results of Voltage and Time type measurement appear on the display.

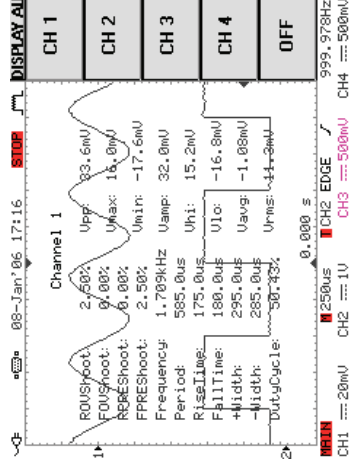

4. Press F5 (OFF) to clear the measurement results from the display.

Delay type

Delay type measurement is not available in this mode. Use the Individual measurement mode (page56) instead.

Cursor Measurement

Cursor line, horizontal or vertical, shows the position and value of the waveform and math operation result.

Use horizontal cursor

Panel operation/ Range 1. Press the Cursor key. **Cursor**

2. Press F1 (Source) repeatedly to select the source channel. **F 1**

Source
CH1

Range

4CH model CH1, 2, 3, 4, Math

2CH model CH1, 2, Math

3. Press F2 (Horizontal) repeatedly to activate the horizontal cursor. **F 2**

Horizontal

Range

|||

Horizontal cursor not activated

||

Left cursor movable, right cursor position fixed

||

Right cursor movable, left cursor position fixed

||


Left and right cursor movable together

4. The cursor position information appears on F4 menu. **F 4**


T1: 236.0us
T2: 460.0us
Δ: 396.0us
f: 2.525kHz

Parameter

- T₁ Time position of the left cursor
- T₂ Time position of the right cursor
- Δ The time distance between the left and right cursor
- f The time distance (Δ) converted to frequency

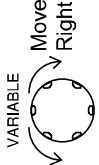5. Use the Variable knob to move the cursor left or right. The F4 content changes accordingly.


Example

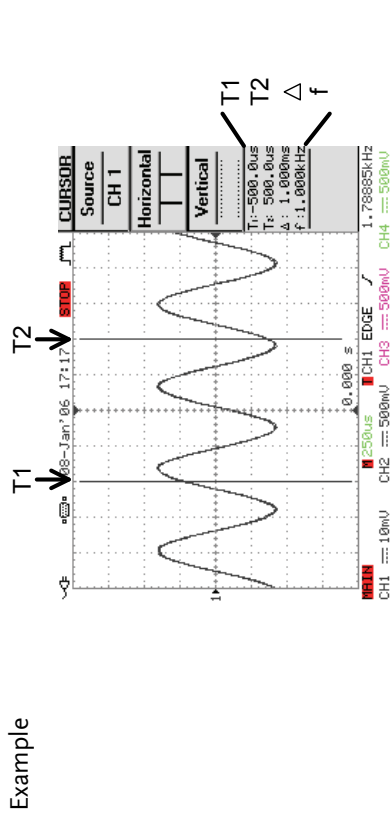

FFT Math

The FFT Math has different F4 content. For FFT math details, see page66.

- f₁ Frequency position of the left cursor
- f₂ Frequency position of the right cursor
- Δ The frequency distance between the left and right cursor
- Div The frequency distance per horizontal division

Use vertical cursor

Panel operation/ Range

1. Press the Cursor key. Cursor
2. Press F1 (Source) repeatedly to select the source channel. Source
CH1 **F 1**
3. Press F2 (Vertical) repeatedly to activate the vertical cursor. Vertical
..... **F 3**

Range

4CH model CH1, 2, 3, 4, Math

2CH model CH1, 2, Math

Range

..... Vertical cursor not activated

----- Upper cursor movable, lower cursor position fixed

----- Lower cursor movable, upper cursor position fixed


===== Upper and lower cursor movable together

4. The cursor position information appears on F5 menu. **F 5**

Parameter

- V1 Voltage level of the upper cursor
- V2 Voltage level of the lower cursor
- Δ The voltage difference between the upper and lower cursor

5. Use the Variable knob to move the cursor up or down. The F5 content changes accordingly. VARIABLE
Move Down
Move Up

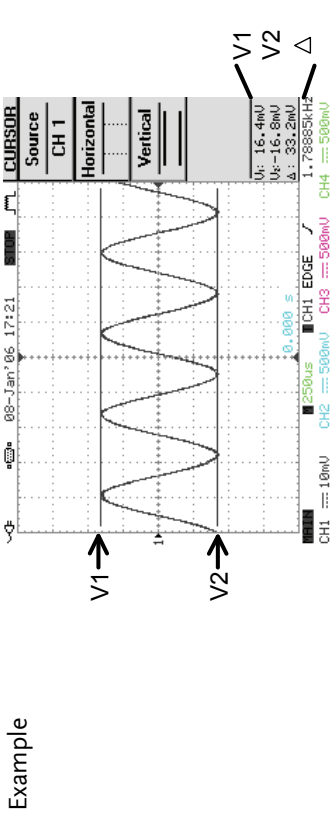

Note: FFT Math

The FFT Math has different F5 content. For FFT math details, see page66.

- M1 Magnitude of the left cursor
- M2 Magnitude of the right cursor
- Δ The frequency distance between the left and right cursor

F 5
M1: 83.6 dB
M2: 3.66 dB
Δ : 80.0 dB

Math Operation

Overview

Background Math operation runs addition, subtraction, multiplication, or FFT using the input signals and shows the result on the display. The resulted waveform characteristics can be measured using the cursors.

Addition (+) Adds amplitude of two signals.

Channel pairs 4CH model: Channel 1 + 2, 3 + 4
2CH model: Channel1 + 2

Subtraction (-) Extracts the amplitude difference between two signals.

Channel pairs 4CH model: Channel 1 - 2, 3 - 4
2CH model: Channel1 - 2

Multiplication (*) Multiplies amplitude of two signals.

Channel pairs 4CH model: Channel 1 * 2, 3 * 4
2CH model: Channel1 * 2

FFT Runs FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman.

Channel 4CH model: Channel 1, 2, 3, 4
2CH model: Channel 1, 2

Hanning FFT window Frequency resolution Good

Amplitude resolution Not good

Suitable for.... Frequency measurement on periodic waveform


Flattop FFT window Frequency resolution Not good
Amplitude resolution Good
Suitable for.... Amplitude measurement on periodic waveform

Rectangular FFT window Frequency resolution Very good
Amplitude resolution Bad
Suitable for.... Single-shot phenomenon (this mode is the same as having no window at all)

Blackman FFT window Frequency resolution Bad
Amplitude resolution Very good
Suitable for.... Amplitude measurement on periodic waveform

Addition/Subtraction/Multiplication

Panel operation 1. Activate the channel pairs.
4CH model: CH1&2, 3&4
2CH model: CH1&2

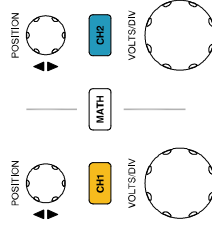


2. Press the Math key.



3. Press F1 (Operation) repeatedly to select addition (+), subtraction (-), or multiplication (x).





4. (For 4CH model only) press F2 repeatedly to select the channel pairs, 1&2 or 3&4.



5. The math measurement result appears on the display. The vertical scale (fixed) of math waveform appears in F5 (Unit/div).

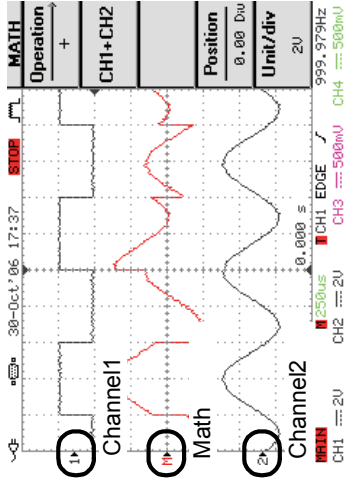

6. To move the math waveform vertically, press F4 (Position) and use the Variable knob.

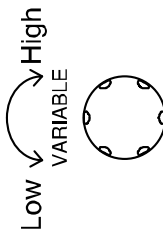

7. To clear the math result from the display, press the Math key again.




FFT


Panel operation 1. Press the Math key.




2. Press F1 (Operation) repeatedly to select FFT.




3. Press F2 repeatedly to select the source channel.




4. Press F3 repeatedly to select the FFT window type.



5. The FFT result appears. For FFT, the horizontal scale changes from time to frequency, and the vertical scale from voltage to dB.

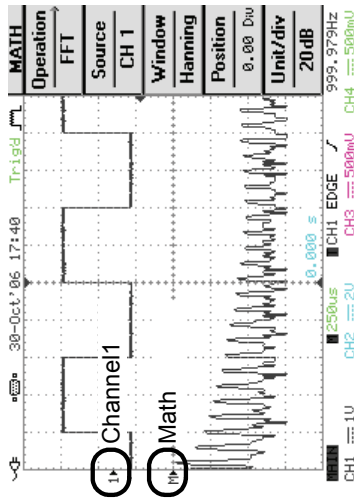


6. To move the FFT waveform vertically, press F4 (Position) and use the Variable knob.

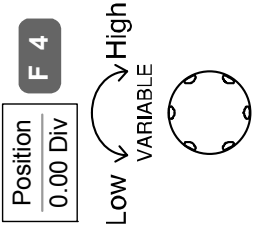

Range -12.00 Div ~ +12.00 Div

7. To select the vertical scale of FFT waveform, press F5 (Unit/Div) repeatedly. RMS Voltage can also be selected instead of dB.



Range 1, 2, 5, 10, 20 dB/Div
RMS Voltage

8. To clear the FFT result from the display, press the Math key again.



Go-NoGo Test


Overview

Background Go-NoGo test checks if a waveform fits inside the user-specified maximum and minimum amplitude boundary (template). The test result comes out in three ways: menu contents, buzzer sound, and pulse signal output from the rear panel terminal.

Test parameters	item	default setting	setup details
Buzzer sound when the test fails (NoGo)	Off	Off	page69
NoGo criteria: in or out of the boundary	Out	Out	page69
Test signal	Channel 1	Channel 1	page70
Test continue or stop when NoGo occurs	Stop	Stop	page70
Boundary (template)	Min/Max	Min/Max	page71
- select minimum and maximum as separate waveforms or create both boundaries from a single waveform			



Default setting


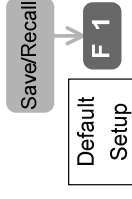


To recall the default setting, press the Save/Recall key, then press F1 (Default Setup). See page44 for details.



Edit: Buzzer sound


Panel operation 1. Press the Utility key. 

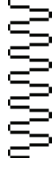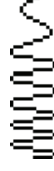

2. Press F3 repeatedly to select the buzzer for test fail (NoGo) notification.  


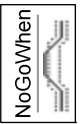
 High pitch
 Middle pitch
 Low pitch
Off  Sound Off


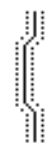
Note The buzzer setting also affects the vertical resolution calibration (page157) – the buzzer notifies the completion of calibration.

Edit: NoGo when


1. Press the Utility key. 

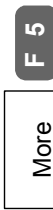
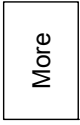
2. Press F5 (More).  



3. Press F4 (NoGo When) repeatedly to select the NoGo condition.  



 NoGo when waveform is outside of the boundary
 NoGo when waveform is inside the boundary

Edit: Source signal


1. Press the Utility key. 



2. Press F5 (More).  



3. Press F3 (Go-NoGo Menu).  



4. Press F2 (Source) repeatedly to select the channel to be tested. (Note: the selected channel is automatically activated)  



Edit: Continue or stop after NoGo


1. Press the Utility key. 

2. Press F5 (More).  

3. Press F3 (Go-NoGo Menu).  

4. Press F3 (Violating) repeatedly to select whether to continue or stop test after the NoGo condition is met.  

Stop	The test stops when the NoGo condition is met. The buzzer does not sound.
Stop+ 	The test stops and the buzzer sounds when the NoGo condition is met.
Continue	The test continues even when the NoGo condition is met. The buzzer does not sound.
Continue+ 	The test continues even when the NoGo condition is met. The buzzer also sounds.

Note If the sound is turned Off in the buzzer setting (page69), the sound is not produced even when selecting Stop/Continue+ .

Edit: Template (boundary)

Background The NoGo template sets the upper and lower amplitude boundary. Two methods are available: Min/Max and Auto.

Min/Max Selects the upper boundary (Max) and lower boundary (Min) as separate waveforms, from the internal memory.

Advantage: The template shape and the distance (allowance) between the source signal are fully customizable.

Disadvantage: The waveforms (templates) have to be stored internally prior to this selection.

Auto Creates the upper and lower boundary together from an input signal, not from internally stored waveform.

Advantage: No need to store the waveforms prior to this selection.

Disadvantage: The template shape is proportional to the source signal. The distance (allowance) between the source signal and upper/lower template are always symmetrical.


Min/Max setting 1. Make sure the source signal, on which the templates are based, appears on the display.


2. Press the Utility key. 

3. Press F5 (More). 

4. Press F3 (Go-NoGo Menu). 


5. Press F1 (Template Edit). 

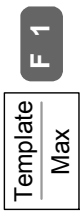6. Press F1 (Template) repeatedly to select the upper (Max) or lower (Min) boundary template. 

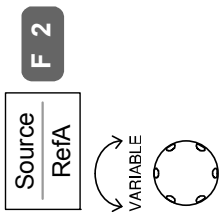
7. Press F2 (Source). Use the Variable knob to select the template from internally stored waveform. For waveform store procedure, see page129. 

- Max (marked as waveform "A" in the display) Maximum boundary: RefA, W1 ~ 20 internal memory
- Min (marked as waveform "B" in the display) Minimum boundary: RefB, W1 ~ 20 internal memory



8. Press F3 (Position). Use the Variable knob to move the waveform amplitude level.

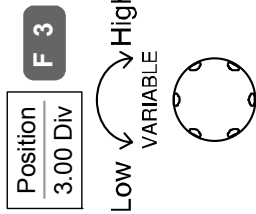

9. Repeat step 9, 10, 11 for the other template setting, Min or Max.



10. When the templates are set, press F4 (Save & Create) to save them.

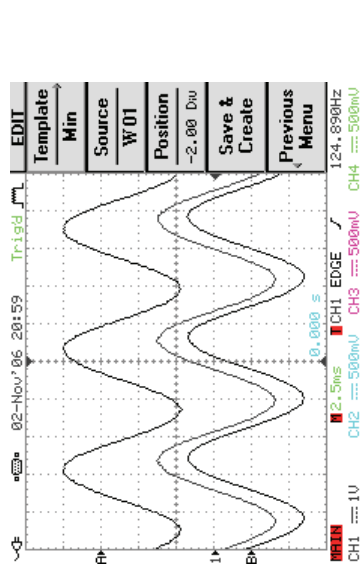


Auto setting 1. Make sure the source signal, on which the templates are based, appears on the display.

2. Press the Utility key.




3. Press F5 (More).



4. Press F3 (Go-NoGo Menu).




5. Press F1 (Template Edit).




6. Press F1 repeatedly to Auto position.




7. Press F2 repeatedly to select the signal channel on which the template is created.



8. The template appears on the screen as waveform A (maximum) and waveform B (minimum). Use the Variable knob to set the tolerance range. The template in the display changes accordingly.

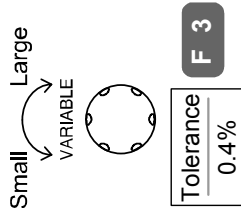


9. If necessary, press F3 (tolerance) repeatedly to select the tolerance unit: percentage (%) or division (div).



10. When the templates are set, press F4 (Save & Create) to save it.

F 4

Save & Create

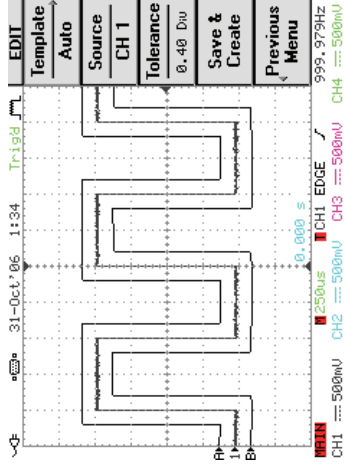

Run Go-NoGo test

This section assumes all Go-NoGo settings (page68) are completed.

Panel operation 1. Press the Utility key.

Utility

2. Press F5 (More).

F 5


More

3. Press F3 (Go-NoGo Menu).

F 3

Go-NoGo Menu

4. Make sure the source signal and the templates (boundary) both appear on the display.

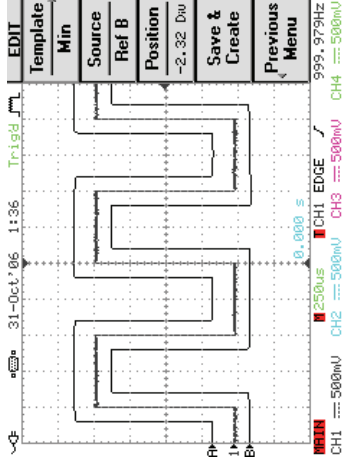

5. Press F4 (Go-NoGo). The Go-NoGo test starts running and stops according to the continue/stop condition (page70). To stop the test manually, Press F4 again.

F 4


Go-NoGo
On

6. The test results appear in F5 menu. The denominator (lower side) shows the number of completed test. The numerator (upper side) shows the number of failed test (NoGo).

F 5

Ratio:
3
6

7. The Go/NoGo terminal (open collector) on the rear panel sends out a 5Vpp, 10us pulse signal to external device every time the NoGo condition is met.



Program

Overview

Background Program function measures input signals using cursors or automatic measurement functions, in user-defined sequence, duration, loop count, and panel settings. This feature is useful for automated and repetitive measurement, such as in assembly line or quality inspection test.

Parameter	Program set	1 set
	Program step	Maximum 20 steps
	Measurement item	Cursor or Automatic measurement
	Time (duration) per step	1 ~ 99 seconds, or user activation
	Program loop	1 ~ 99 loops, the first and last step settable

- Programming step
1. Show the target waveform on the display and decide the type of measurement that needs to be done: Horizontal/Vertical Cursor or Automatic measurement.
 2. Setup the other panel configurations: trigger, acquisition, horizontal/vertical scale, etc. Save the settings to the internal memory. See page128 for details.
 3. Edit the program (page78) using the internally stored panel setup.
 4. Run the program (page80).

Edit program



This section assumes that the panel setting is already defined and saved (step 1 and 2 in the previous page).

Panel operation



1. Press the Program key. The display changes into program edit mode.




2. Press F1 (Edit/Play) to select the Edit side.

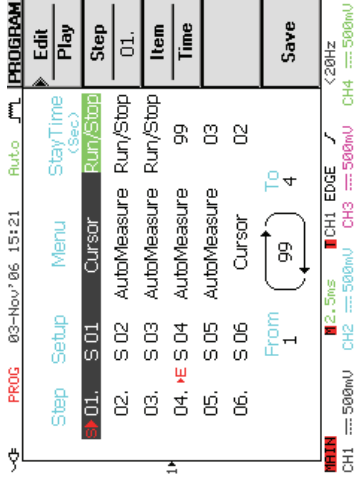

3. Press F2 (Step). Use the Variable knob to select the step that needs to be edited. The cursor on the display moves accordingly.




4. Press F3 (Item) repeatedly to select the three parameters for a step: panel setup, menu (Cursor or Automatic measurement), and time.



- Setup Selects the panel setup stored in the internal memory. S01 ~ S20. For panel setup store/recall details, see page128 (save) or page138 (recall).
- Menu Selects the measured item: Cursor or Automatic measurement.
- Time Sets the duration of the step, 1 ~ 99 seconds or user control (Run/Stop). When Run/Stop is selected, the program freezes at that step until the user presses the Run/Stop key.

5. Continue the above for all program steps. When completed, press F5 (Save) to confirm and save the program.



Run program



This section assumes that the program editing (see previous page) is completed.

Panel operation




1. Press the Program key. The display changes into program mode.


2. Press F1 (Edit/Play) repeatedly to select the Play side.

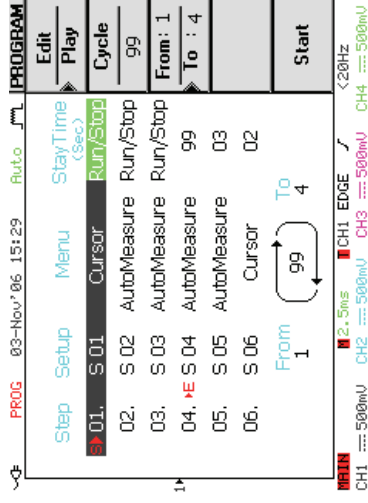


3. Press F2 (Cycle). Use the Variable knob to select the number of program loop: 1 ~ 99.

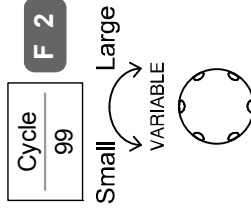

4. Press F3 (From/To) to select the From: side. Use the Variable knob to select the program start step: 1 ~ 20. The "S" mark appears in the selected step.

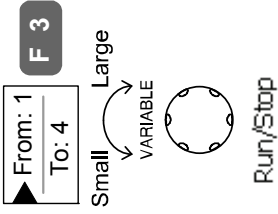


5. Press F3 (From/To) to select the To: side. Use the Variable knob to select the program end step: 1 ~ 20. Note that the To: step must be larger or equal to the From: step. The "E" mark appears in the selected step.

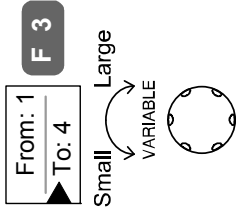

04. **E** S 04 AutoMeasure 99

6. Press F5 (Start). The display changes into program running mode and starts executing the first step.



7. The message "Press Run/Stop key to continue" on the bottom of the display shows the user has to activate the next step manually. Press the Run/Stop key to move to the next step.



8. To stop the program manually, press the Auto test/Stop key. When all steps are completed, the program stops running.



CONFIGURATION

Acquisition	Select acquisition mode.....	84
	Select waveform memory length	86
	Real time vs Equivalent time sampling mode ..	89
Display	Select waveform drawing (vector/dot)	90
	Accumulate waveform.....	91
	Set display contrast	92
	Freeze the waveform	92
	Select display grid	93
	Turn Off menu	93
Horizontal	Move waveform position horizontally	94
	Select horizontal scale.....	95
	Select waveform update mode	96
	Zoom waveform horizontally	98
	Show waveform in X-Y mode.....	99
Vertical (Channel)	Move waveform position vertically.....	101
	Select vertical scale	101
	Select coupling mode	102
	Invert waveform vertically	103
	Limit bandwidth	103
	Select probe attenuation level.....	104

Trigger

- Trigger type overview 105
- Trigger parameter overview 106
- Use edge trigger 109
- Use advanced delay trigger (2CH model) 110
- Use video trigger 112
- Use pulse width trigger 113

System

- View system information 115
- Select menu language 115
- Set date and time 116

Acquisition

Acquisition process samples the analog input signals and converts them into digital format for internal processing.

Select acquisition mode


Panel operation

1. Press the Acquire key.


Acquire
2. Select the acquisition mode from F1 (Normal) ~ F3 (Average). The acquisition icon on the top right corner of the display changes accordingly.


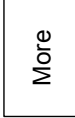
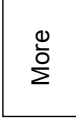

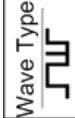

Normal	F 1
Peak Detect	F 2
Average 2	F 3


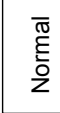

Range	<p>Normal </p> <p>Peak Detect </p> <p>Average </p>	<p>All of the acquired data is used to draw the waveform.</p> <p>Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.</p> <p>Multiple acquired data are averaged. This mode is useful for drawing a noise-free waveform. To select the average number, press F3 repeatedly. Average number: 2, 4, 8, 16, 32, 64, 128, 256</p>
-------	--	--

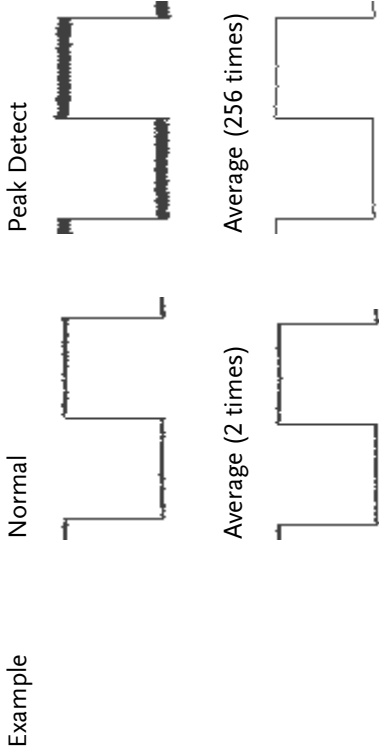


Peak detect effect 1. One of the probe compensation waveforms can demonstrate peak detection mode. Connect the probe to the probe compensation output.



- Press the Utility key. 
- Press F5 (More) twice.  
- Press F1 (Wave Type) and select the  waveform. 
- Press the Auto Set key.  GDS-2000 positions the waveform in the center of the display.

- Press the Acquire key. 
- Press F2 (Peak Detect) or F1 (Normal) and see that in the Peak detection mode, spike noise is captured.  

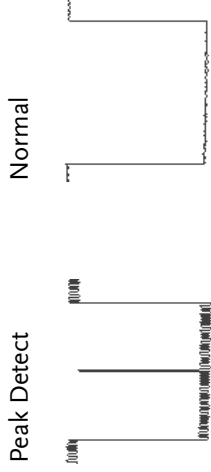

Select waveform memory length


Background Memory length defines the amount of waveform data (points) included in each trigger event. Two modes are available: short and long.

Short mode Each waveform includes fewer points and is updated rapidly. It is useful for observing the shape of fast-changing waveform such as Frequency Modulation.

Long mode Each waveform includes more points and is updated relatively slowly. It is useful for observing the details of single-shot phenomenon such as spike noise.

- Panel operation 1. Press the Acquire key. 

- Press F5 (Mem Leng) to select the memory length (points), short or long.




Range (memory point)	500	Short memory length; useful for catching high frequency signal.
	5000	Long memory length when three or four channels are active.
	12500	Long memory length when two channels are active.
	25000	Long memory length when only one channel is active.

Example Short memory (better) Long memory




Example Short memory Long memory (better)

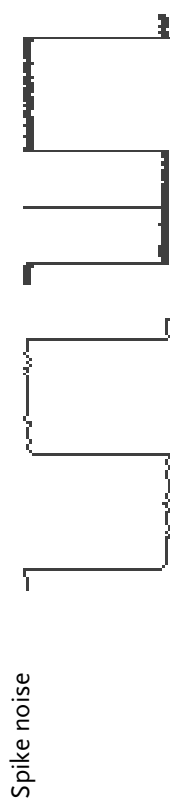

Note
The display always shows 250 points (300 when the menu is turned Off) regardless of the memory length. In short memory length, all 500 points can be observed. In long memory length, either the memory points are condensed into 500 points (Real-time sampling mode) or all points can be observed (Equivalent-time sampling mode). For sampling mode details, see page89.

Long memory effect using probe comp. waveform
1. One of the probe compensation waveform can demonstrate long memory mode. Connect the probe to the output.




- Press the Utility key.



- Press F5 (More) twice.




- Press F1 (Wave Type) and select the waveform.



- Press the Auto Set key.


GDS-2000 positions the waveform in the center of the display. Set the horizontal scale to 2.5ms to observe the whole waveform shape.

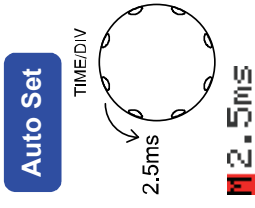

- Press the Acquire key.



- Press F5 (Mem Leng) repeatedly to switch between short and long memory length.



Short memory

Long memory



Real time vs Equivalent time sampling mode


Background GDS-2000 automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channel and sampling rate.

Parameter	Real-time sampling	One sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low.
	Equivalent-time sampling	Multiple numbers of sampled data are accumulated to reconstruct a single waveform. Restores greater waveform details but takes longer to update the waveform. This mode is used when the sampling rate becomes higher.

Real-time / Equivalent-time sampling threshold

Input channel: Activated Not activated

— Does not matter

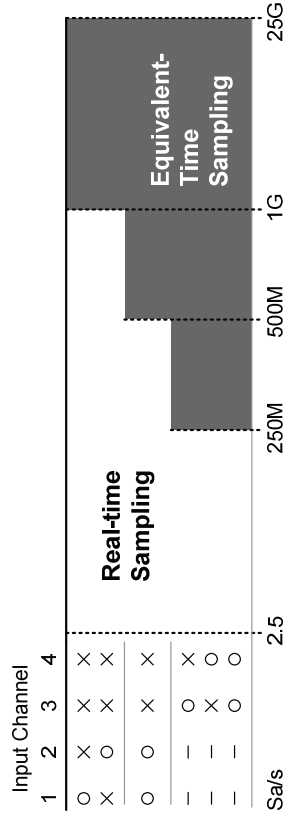

Display


Display menu defines how the waveforms and parameters appear on the main LCD display.

Select waveform drawing (vector/dot)

Panel operation 1. Press the Display key.




2. Press F1 (Type) repeatedly to select the waveform drawing.




Range	Dots	Only the sampled dots are displayed.
	Vectors	Both the sampled dots and the connecting line are displayed.

Example: Dots (square wave)

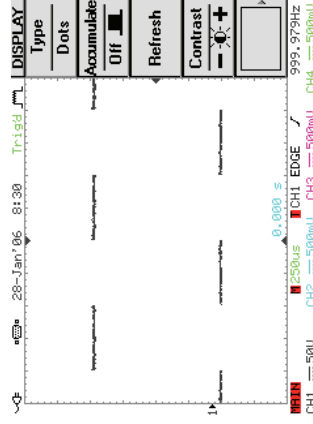

Example: Vectors (square wave)

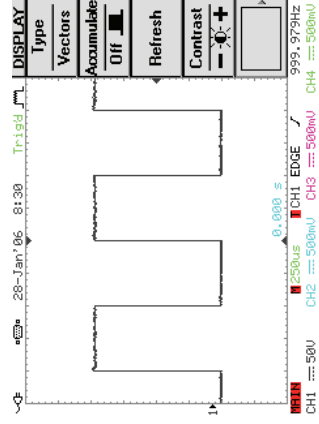

Accumulate waveform

Background Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation.

Panel operation 1. Press the Display key.



2. Press F2 (Accumulate) to turn On waveform accumulation.




3. To clear the accumulation and start over (refresh), press F3 (Refresh).




Example

Accumulation On

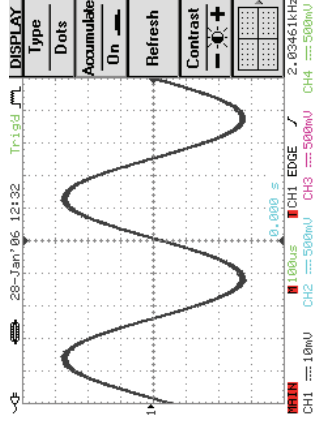

Accumulation Off

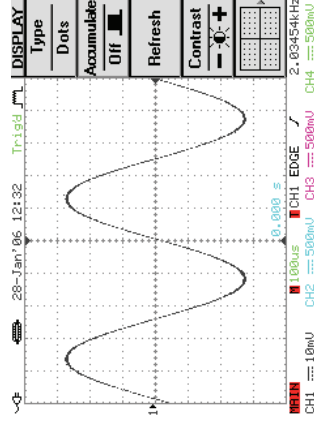


Set display contrast

Panel operation 1. Press the Display key.




2. Press F4 (Contrast).



3a. Turn the Variable knob left to lower the contrast (dark display).




3b. Turn the Variable knob right to raise the contrast (bright display).

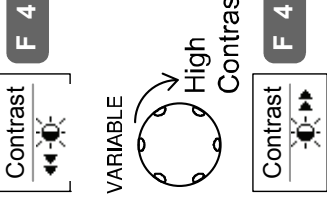


Freeze the waveform (Run/Stop)

For more details about Run/Stop mode, see page49.

Panel operation 1. Press the Run/Stop key. To unfreeze the waveform, press the Run/Stop key again.



2. The waveform and the trigger freezes. The trigger indicator on the top right of the display shows Stop.




Select display grid

Panel operation 1. Press the Display key.



2. Press F5 (Grid type) repeatedly to select the grid.



Range



Shows the full grid; X and Y axis for each division.




Shows only the center X and Y frame.




Shows only the outer frame.

Turn Off menu

Panel operation 1. Press the MENU ON/OFF key below F1 ~ F5.

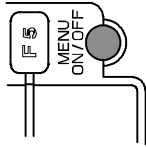

2. The menu disappears. The waveform points changes from 250 to 300.

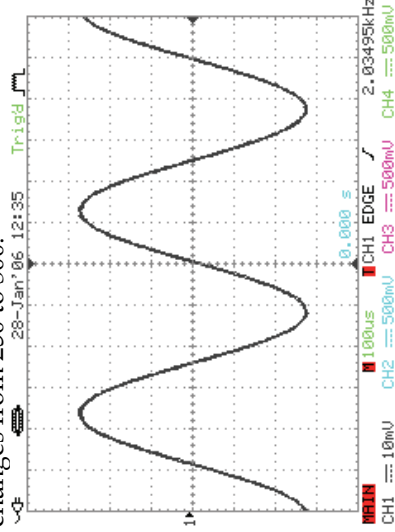


Horizontal View

This section describes how to set the horizontal scale, position, and waveform display mode.

Move waveform position horizontally


Panel operation

The horizontal position knob moves the waveform left/right. As the waveform moves, the memory bar appears on the top of the display indicating the portion of displayed waveform in the memory.

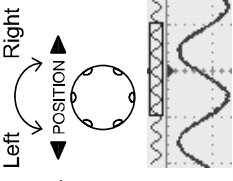


Run mode

In Run mode, the memory bar keeps its relative position in the memory since the entire memory is continuously captured and updated.

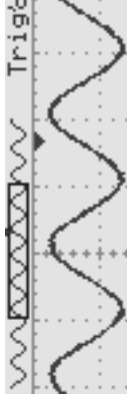


Stop mode

In Stop mode, the memory bar moves along with the waveform until it reaches the end of the memory.

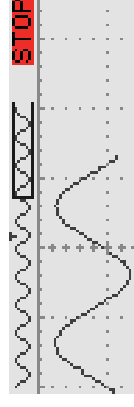


Select horizontal scale

Select horizontal scale To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

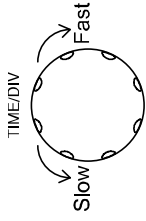


Range 1 ns/Div ~ 10s/Div, 1-2-5 increment

The corresponding sampling rate appears on the upper side of the display. The timebase indicator appears on the lower side.

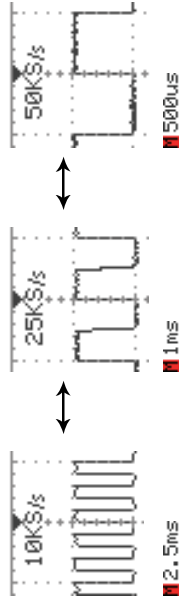

Run mode

In Run mode, the memory bar and waveform size keep their proportion. When the timebase becomes slower, it automatically switches to Scan mode (see the next page).



Stop mode


In Stop mode, the memory bar and waveform size changes according to the scale.



Select waveform update mode

Background

The display update mode is switched automatically or manually according to timebase and trigger. The indicator on the bottom left of the display shows the current mode.



Main mode

MAIN Updates the whole displayed waveform at once. Automatically selected when the timebase (sampling rate) is fast.

Timebase $\leq 50\text{ms}/\text{div}$ ($\geq 500\text{Sa}/\text{s}$)


Trigger all modes

Scan mode

SCAN Updates the waveform gradually from the left side of the display to the right. The waveform position is fixed. Automatically selected when the timebase (sampling rate) is slow.

Timebase $\geq 100\text{ms}/\text{div}$ ($\leq 250\text{Sa}/\text{s}$)

Trigger Auto mode only

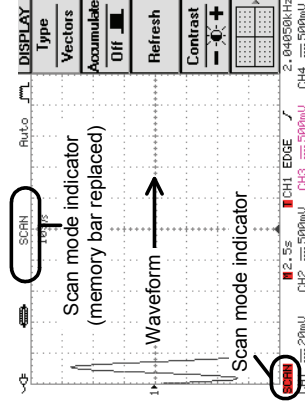

Note


- When the update mode switches from Main to Scan, GDS-2000 automatically selects the Auto trigger mode. See page105 for trigger details.
- To view the signal peak clearly in Scan mode, turn on the Peak detection (page84).

Roll mode

ROLL Updates and moves the waveform gradually from the right side of the display to the left. Manually selected when the timebase (sampling rate) is slow.

Timebase $\geq 250\text{ms/div}$ ($\leq 100\text{Sa/s}$)

Trigger all modes


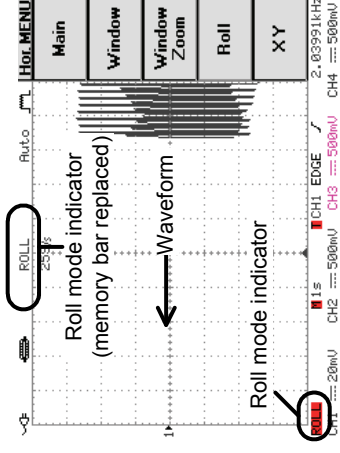


Select Roll mode manually

1. Press the Horizontal menu key.




2. Press F4 (Roll). The waveform starts scrolling from the right side of the display. The update mode indicator shows Roll mode.



Note

The Roll mode locks the timebase to be at least 250ms/div (100Sa/s). If faster timebase or sampling rate is required, get out of the Roll mode by pressing F1 (Main).



Zoom waveform horizontally


Panel operation/ 1. Press the Horizontal Menu key.




2. Press F2 (Window) key.



3. The WINDOW indicator, which shows the zoom range, appears on the bottom left corner of the display. Use the horizontal position knob to move the zoom range sideways, and the zoom range width.

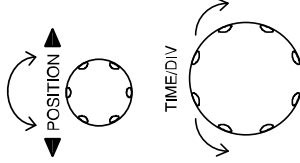


The width of the bar in the middle of the display is the actual zoomed area.

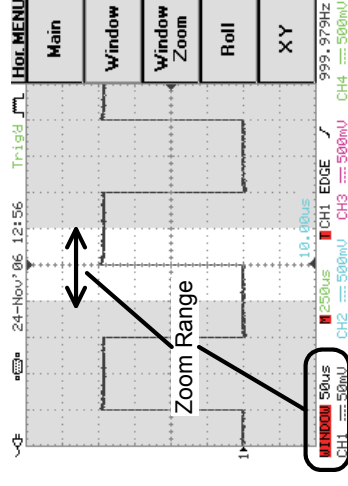


Zoom range 1ns ~ 1ms

- Press F3 (Window Zoom). The specified range gets zoomed. The ZOOM indicator appears on the bottom left side of the display.

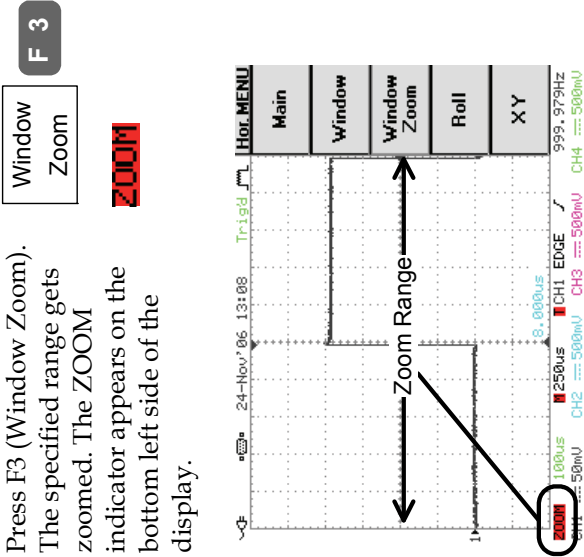



- To go back to the original view, press F1 (Main).



Show waveform in X-Y mode

Background The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two.



- Panel operation**
- Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis).
 - Make sure both Channel 1 and 2 are activated (LED On). Press the Channel key if necessary.

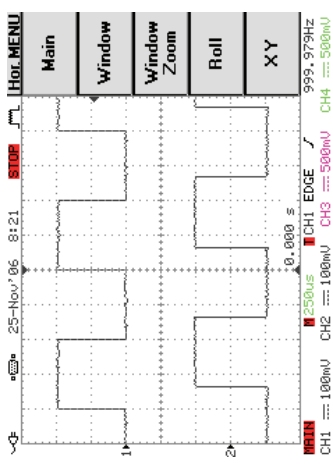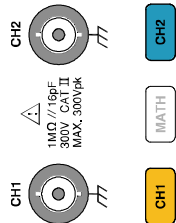


- Press the Horizontal menu key.



- Press F5 (XY). The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis.

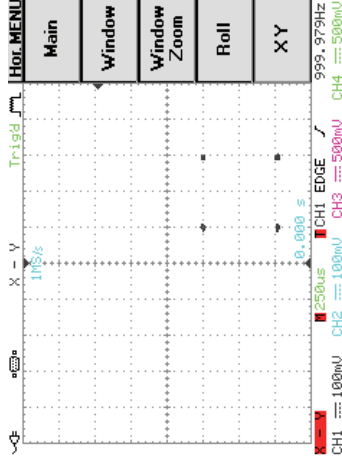

- Horizontal Position knob and Time/Div knob are disabled under the X-Y mode. To move the waveform position, use the vertical position knob: Channel 1 knob moves the waveform horizontally, Channel 2 knob vertically.


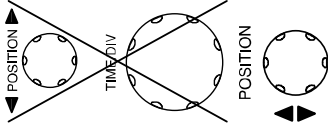


Vertical View (Channel)

This section describes how to set the vertical scale, position, and coupling mode.

Move waveform position vertically

Panel operation To move the waveform up or down, turn the vertical position knob for each channel.

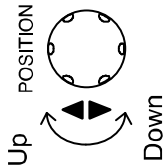


As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.


Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale

Panel operation To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).

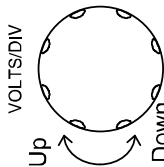

The vertical scale indicator on the bottom left of the display changes accordingly.



Range 2mV/Div ~ 5V/Div, 1-2-5 increments


Stop mode In Stop mode, the vertical scale setting can be changed but the waveform shape stays the same.

Select coupling mode

Panel operation 1. Press the Channel key.



2. Press F1 (Coupling) repeatedly to select the coupling mode.



Range



DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.




Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal voltage with respect to the ground level.



AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signal.

Example

Observing the AC portion of the waveform using AC coupling

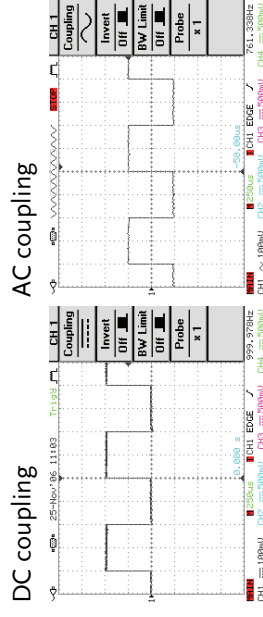


Invert waveform vertically


Panel operation 1. Press the Channel key.



2. Press F2 (Invert) to invert the waveform.



Example

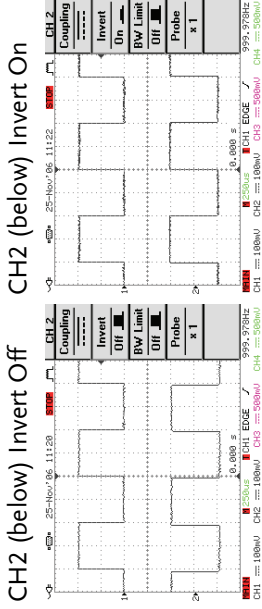

Limit bandwidth

Background Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape.


Panel operation 1. Press the Channel key.



2. Press F3 (BW Limit) to turn Off the limitation.




3. The BW icon appears in the channel indicator at the bottom of the display.

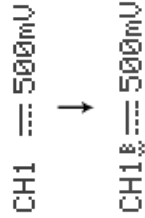


Example

BW Limit Off

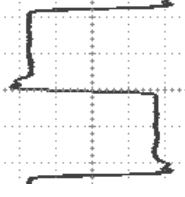

BW Limit On

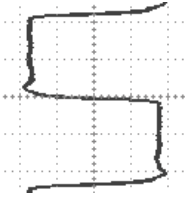


Select probe attenuation level

Background A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value on DUT.

Panel operation 1. Press the Channel key.



2. Press F4 (Probe) repeatedly to select the attenuation level.



- The voltage scale in the channel indicator changes accordingly. There is no change in the waveform shape.
 - (x1) CH1 50V
 - (x10) CH1 500V
 - (x100) CH1 5000V

Range x1, x10, x100

Note The attenuation factor adds no influence on the real signal. It just changes the voltage scale on the display.

Trigger


Trigger configures the condition GDS-2000 captures the incoming signal.

Trigger type overview


Edge (+Delay) Triggers when the signal crosses an amplitude threshold in either positive or negative slope. (for 2CH models only) The advanced Delay trigger works in tandem with the edge trigger, by waiting for a specified time or number of event before the edge trigger starts. This method allows pinpointing a location in a long series of trigger events.

Note: when using the delay trigger, trigger source is limited to Channel 1 or 2.

Delay trigger example (by event)

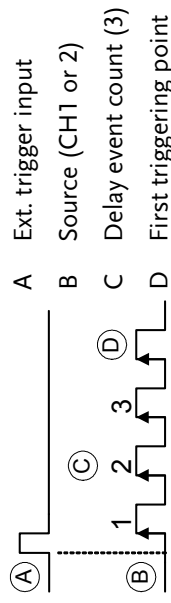


Delay trigger example (by time)

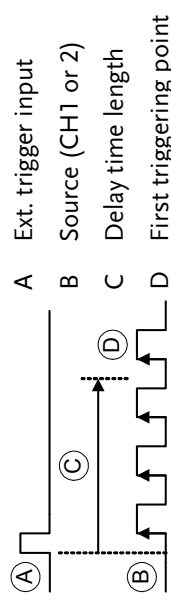






Video Extracts a sync pulse from a video format signal, and triggers on a specific line or field.

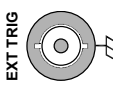Pulse Triggers when the pulse width of the signal is too narrow or too wide compared to the setting.

Trigger parameter overview

Trigger source	CH1 ~ 4	Channel 1 ~ 4 input signals
Line	AC	mains signal
Ext	(For 2CH models only) external trigger input signal	
Trigger mode	Auto	GDS-2000 generates an internal trigger if there is no trigger event, to make sure waveforms are constantly updated regardless of trigger events. Select this mode especially when viewing rolling waveform at slower timebase.
	Normal	GDS-2000 acquires waveform only when a trigger event occurs.
	Single	GDS-2000 acquires waveform once when a trigger event occurs, then stop acquiring. Press the Run/Stop key to acquire waveform again.
Auto level		When turning this function ON, GDS-2000 automatically adjusts the trigger level to the center amplitude of the waveform.
Holdoff		The holdoff function defines the waiting period before GDS-2000 starts triggering again after a trigger point. The Holdoff function ensures a stable display.

Video standard (video trigger)	NTSC PAL SECAM	National Television System Committee Phase Alternative by Line SEquential Couleur A Memoire
Sync polarity (video trigger)	 	Positive polarity Negative polarity
Video line (video trigger)	Selects the trigger point in the video signal. field line	1 or 2 1~263 for NTSC, 1~313 for PAL/SECAM
Pulse condition (pulse trigger)	Sets the pulse width (20ns ~ 200us) and the triggering condition. > <	Longer than = Equal to Shorter than ≠ Not equal to
Trigger time (delay trigger)	Sets the delay time (100ns ~ 1.3ms) between the trigger event and the real trigger timing.	
Trigger event (delay trigger)	Sets the number of events (2 ~ 65000) passed after the trigger event, until the real trigger timing.	
Ext. input level (delay trigger)	Sets the amplitude threshold level for the external trigger input signal. TTL ECL User	1.48V 1.35V -12V ~ +12V, user-set level
Trigger slope	 	Triggers on the rising edge. Triggers on the falling edge.
Trigger coupling		Triggers only on the AC component.



Triggers on AC+DC component.

Frequency rejection	LF HF	Puts a high-pass filter and rejects the frequency below 50kHz. Puts a low-pass filter and rejects the frequency above 50kHz.
---------------------	----------	---

Noise rejection Rejects noise signal.

Setup Holdoff and Auto level

Background Holdoff function defines the waiting period before GDS-2000 starts triggering again after a trigger point. Auto level function automatically adjusts the trigger level to the center amplitude of the waveform.

Panel operation 1. Press the Trigger menu key twice.



2. To set the Holdoff time, press F1 (Holdoff) and use the Variable knob. The resolution depends on the horizontal scale.


Holdoff 40.0ns

VARIABLE

Short Long

Range 40ns~2.5s

Pressing F2 (Set to Minimum) sets the Holdoff time to the minimum, 40ns.



Note: The holdoff function is automatically disabled when the waveform update mode is in Roll or Scan mode (page96).

3. To turn Auto Level On/Off, press F5 (Auto Level).



Use edge trigger

Panel operation 1. Press the Trigger menu key.



2. Press F1 repeatedly to select edge trigger. The edge trigger indicator appears at the bottom of the display.



F 1

CH1 EDGE

From left: channel, edge trigger, slope

3. Press F2 repeatedly to select the trigger source.



F 2

Range Channel 1 ~ 4, Line, Ext

4. Press F3 repeatedly to select the trigger mode.



F 3


Range Auto, Normal, Single

5. Press F5 (Slope/coupling) to set trigger slope and coupling.



F 5

6. Press F1 (Slope) repeatedly to select the trigger slope, which also appears at the bottom of the display.



F 1

Range Rising edge, falling edge

7. Press F2 (Coupling) repeatedly to select the trigger coupling.



F 2

Range DC, AC


8. Press F3 (Rejection) to select the frequency rejection mode.



F 3

Range LF, HF, Off


9. Press F4 (Noise Rej) to turn the noise rejection On/Off.



F 4

Range On, Off

10. Press F5 (Previous menu) to go back to the previous menu.




F 5

Use advanced delay trigger (2CH model)

Panel operation 1. Make sure the edge trigger source is set to CH1 or CH2. If not, GDS-2000 automatically selects CH1 as the source.

2. Press F1 repeatedly to select Delay trigger.



F 1

CH1 DELAY

From left: channel, delay trigger, slope


3. Press F2 (By time) or F3 (By event) and use the Variable knob to select the delay time or event after the first trigger condition.



F 2




F 3




Range 100ns ~ 1.3ms (by time)
2 ~ 65000 (by event)

4. Press F4 (Ext) repeatedly to select the threshold level for the external trigger input.

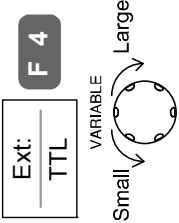

Range TTL (1.48V), ECL (1.35V), User (-12V ~ +12V)

5. Press F5 (Slope/Coupling) to set the slope and coupling condition for external trigger input signal. Note that this setting does not affect the trigger source signal (Channel 1 or 2).




Use video trigger

- Panel operation
1. Press the Trigger menu key.




2. Press F1 repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display.



CH1 VIDEO P


From left: channel, video trigger, polarity

3. Press F2 repeatedly to select the trigger source channel.




Range Channel 1 ~ 4

4. Press F3 repeatedly to select the video standard.





Range NTSC, PAL, SECAM

5. Press F4 repeatedly to select the video signal polarity.



Range positive, negative

6. Press F5 repeatedly to select the video field line. Use the Variable knob to select the video line.



Field 1, 2


Video line NTSC: 1 ~ 262 (Even), 1 ~ 263 (Odd)
 PAL/SECAM: 1 ~ 312 (Even),
 1 ~ 313 (Odd)

Use pulse width trigger

Panel operation 1. Press the Trigger menu key.



2. Press F1 repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display.



F 1

CH1 PULSE

From left: channel, pulse width trigger, slope

3. Press F2 repeatedly to select the trigger source.



F 2

Range Channel 1 ~ 4, Line, Ext

4. Press F3 repeatedly to select the trigger mode.




F 3

Range Auto, Normal, Single

5. Press F4 repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width.




F 4



Condition > , < , = , ≠


Width 20ns ~ 200us

6. Press F5 to set trigger slope and coupling.



F 5

7. Press F1 (Slope) repeatedly to select the trigger slope, which also appears at the bottom of the display.



F 1

Range Rising edge, falling edge

8. Press F2 (Coupling) repeatedly to select the trigger coupling.



F 2

Range DC, AC

9. Press F3 (Rejection) to select the frequency rejection mode.



F 3

Range LF, HF, Off

10. Press F4 (Noise Rej) to turn the noise rejection On/Off.



F 4

Range On, Off

11. Press F5 (Previous menu) to go back to the previous menu.



F 5

System Info / Language / Clock

This section describes how to set the interface, beeper, language, time/date, and probe compensation signal.

View system information

Panel operation 1. Press the Utility key.




2. Press F5 (More).



F 5

3. Press F2 (System Info). The upper half of the display shows the system information in the following format.



F 2

- Manufacturer name
- Serial number
- Model name
- Firmware version

4. Press any other key (for example F5 (More) to go back to the waveform display mode).



F 5

Select menu language

Parameter The following is the list of menu language available by default. Language selection differs according to the region to which GDS-2000 is shipped.


- English
- Chinese (simplified)
- Chinese (traditional)
- Korean

- Spanish
- Russian
- Dutch
- Italian
- Portuguese
- Japanese
- German
- Polish
- French

Panel operation 1. Press the Utility key.



2. Press F4 (Language) repeatedly to select the language.



F 4

Set date and time

Panel operation/ parameter 1. Press the Utility key.



2. Press F5 (More) twice.




F 5




F 5

3. Press F2 (Time Set Menu).



F 2


4. Press F2 (Year/ Month/ Date) repeatedly. Use the Variable knob to change the value.




F 2

Year	2000 ~ 2037
Month	1 ~ 12
Day	1 ~ 31


5. Press F4 (Save) to confirm the value.



6. Press F1 (Date) to switch to the Time setting menu.




7. Press F2 (Hour / Minute) repeatedly. Use the Variable knob to change the value.

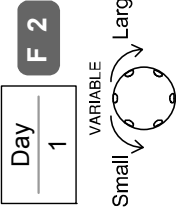


Hour 0 ~ 23
Minute 0 ~ 59

8. Press F4 (Save) to confirm the value.



9. Turn Off the display and turn it On again (power cycle).



10. Make sure the date/time setting is correctly reflected at the top of the display.



SAVE/RECALL

File format / Utility	Display image file format.....	119
	Waveform file format.....	119
	Setup file format.....	121
	USB flash drive file utility.....	122
Save	File type/source/destination.....	127
	Save panel setting.....	128
	Save waveform.....	129
	Save All.....	133
Recall	File type/source/destination.....	136
	Recall default panel setting.....	136
	Recall waveform.....	138
	Recall waveform.....	139
	Recall waveform.....	141

File Format/Utility

Display image file format

Format	DSxxxx.bmp or Axxxx.bmp (Windows bitmap format)
Contents	The current display image in 234 x 320 pixels, color format. The background color can be inverted (Ink saver function).

Waveform file format

Format	DSxxxx.csv or Axxxx.csv (Comma-separated values format, can be opened in spreadsheet applications such as Microsoft Excel)
--------	--


Waveform type	CH1 ~ 4	Input channel signal
Math	Math	Math operation result (page63)

Storage location	W1 ~ W20	Waveform file stored in the internal memory. Stored waveforms can be copied to USB flash drive for transfer, or to Ref. A ~ D for showing on the display (W1 ~ W20 waveforms cannot be directly recalled on the display).
Ref A ~ D		Reference waveform stored in the internal memory, separate from W1 ~ W20. From Ref A ~ D, waveforms can be recalled directly on the display with amplitude and frequency information. Useful for reference purpose in measurements.

Contents:
waveform data

The waveform data can be used for detailed analysis. It consists of horizontal and vertical position of the waveform for the entire memory length.

One division includes 25 points of horizontal and vertical data. The vertical point starts from the center line. The horizontal point starts from the leftmost waveform.

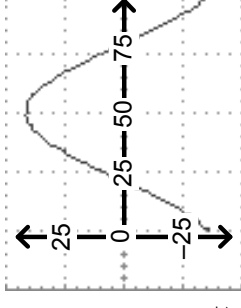

The time length or voltage level which each data point represents differs according to the vertical and horizontal scale. For example:

Vertical scale: 10mV/div (4mV per point)

Horizontal scale: 100us/div (4us per point)

Contents: other
data

The following information is also included in the waveform file.

- Memory length
- source channel
- vertical offset
- vertical scale
- coupling mode
- waveform last dot address
- date and time
- trigger level
- vertical position
- time base
- probe attenuation
- horizontal view
- horizontal scale
- sampling period
- sampling mode

Setup file format

Format	DSxxxx.set or Axxxx.set (proprietary format)
The setup file saves or recalls the following setting.	
Contents	<ul style="list-style-type: none"> Acquire <ul style="list-style-type: none"> • mode • memory length Cursor <ul style="list-style-type: none"> • source channel • cursor on/off • cursor location Display <ul style="list-style-type: none"> • dots/vectors • accumulation on/off • grid type Measure <ul style="list-style-type: none"> • item • source channel Utility <ul style="list-style-type: none"> • hardcopy type • ink saver on/off • interface type • RS-232 config • buzzer type • GPIB address • Go-NoGo cond. • menu language Program <ul style="list-style-type: none"> • step contents • loop count • start/stop steps Horizontal <ul style="list-style-type: none"> • display mode • scale • position Trigger <ul style="list-style-type: none"> • trigger type • source channel • trigger mode • video standard • video polarity • video line • pulse timing • slope/coupling Channel (vertical) <ul style="list-style-type: none"> • vertical scale • vertical position • coupling mode • invert on/off • bandwidth limit • probe on/off • attenuation Math <ul style="list-style-type: none"> • operation type • source channel • vertical position • unit/div • FFT window


USB flash drive file utility

Background

For USB flash drive, file deletion, folder creation, file/folder rename are available from the front panel. This feature is not available for internally stored files.


Panel operation

1. Connect the drive to the front or rear panel USB port.
 Note: Only one host connection, front or rear, is allowed at a time.

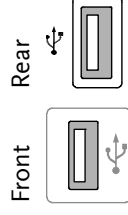


Save/Recall





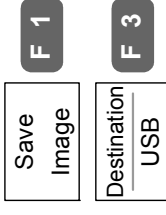
2. Press the Save/Recall key.
 Select any save or recall functionality, for example USB destination in Save image function.




File Utilities

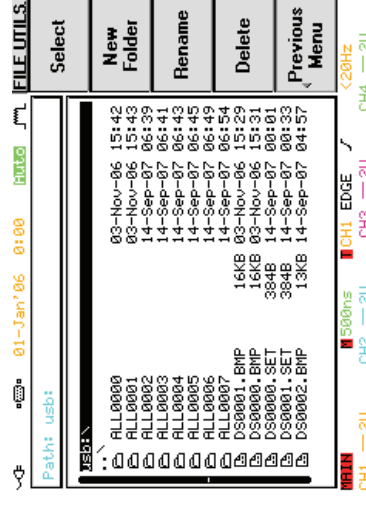

3. Press F5 (File Utilities). The display shows the USB flash drive contents, root directory.



- Use the Variable knob to move the cursor. Press F1 (Select) to go into the folder or go back to the previous directory level.
 - Down VARIABLE 
 - Up VARIABLE 
-  Go back to the root directory **F 1** Select
 -  Go back to the previous (higher) directory
 -  Go into the folder

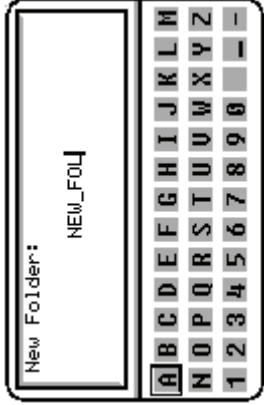- Create new folder / Rename file or folder
- Move the cursor to the file or folder location and press F2 (New Folder) or F3 (Rename). The file/folder name and the character map appear on the display.



- Use the Variable knob to move the pointer to the characters. Press F1 (Enter Character) to add a character or F2 (Back Space) to delete a character.
 - Left VARIABLE 
 - Right VARIABLE 

- When editing is completed, press F4 (Save). A new folder or a new folder/file name is created. **F 4** Save
- Press F5 (Previous Menu) to go back to the previous menu. **F 5** Previous Menu

- Delete folder/file
- Move the cursor to the folder or file location and press F4 (Delete). A message appears at the bottom of the display, asking additional confirmation.

Press F4 again to confirm this process.

- If the file/folder still needs to be deleted, press F4 (Delete) again to complete deletion. To cancel deletion, press any other key. **F 4** Delete
- The USB flash drive content is updated. Press F5 (Previous Menu) to go back to Save/Recall menu. **F 5** Previous Menu

Quick Save (HardCopy)

Background

The Hardcopy key works as a shortcut for saving or printing out information.



Once set, subsequent file saving only requires pressing the Hardcopy key. Hardcopy key can be configured into three operations: save image, save all (image, waveform, setup), and printing.

The printing operation is described in page145.


Using the Save/Recall key can also save files but with more configurations. For details, see page127.



Functionality

- | | |
|--------------------|---|
| Save image (*.bmp) | Saves the current display image into a USB flash drive connected to the front or rear panel terminal. |
| Save all | Saves the following items into a USB flash drive connected to the front or rear panel terminal. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system setup (*.set) • Current waveform data (*.csv) • Last stored system setup (*.set) • Last stored waveform data (*.csv) |
| Print out | Prints out the display image to an external printer connected to USB port. For details, see page145. |


- Panel operation
1. Connect the drive to the front or rear panel USB port.
 Note: Only one host connection, front or rear, is allowed at a time.

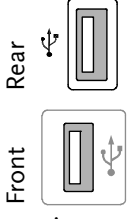


2. Press the Utility key.




3. Press F1 (Hardcopy Menu).



4. Press F1 (Function) repeatedly to select Save image or Save all.

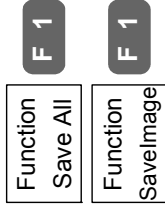

5. To invert the color for the saved or printed display image, press F2 (Ink Saver) and turn On the Ink Saver.

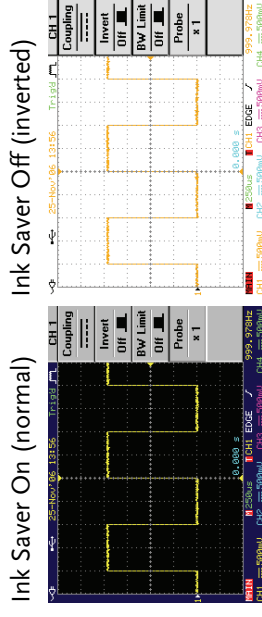

6. To save the image or folder, press the Hardcopy key.
 The file or folder is saved to the root directory of the USB flash drive.




Save


File type/source/destination


Item	Source	Destination
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> Front panel settings 	<ul style="list-style-type: none"> Internal memory: S1 ~ S20 External memory: USB
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> Channel 1 ~ 4 Math operation result Reference waveform A ~ D 	<ul style="list-style-type: none"> Internal memory: Reference waveform A ~ D, W1 ~ W20 External memory: USB
Display image (DSxxxx.bmp)	<ul style="list-style-type: none"> Display image 	<ul style="list-style-type: none"> External memory: USB
Save All	<ul style="list-style-type: none"> Display image (Axxxx.bmp) Waveform data (Axxxx.csv) Front panel settings (Axxxx.set) 	<ul style="list-style-type: none"> External memory: USB


Save panel setting

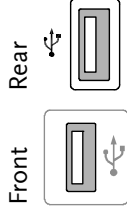
- Panel operation
1. (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port.


Note: Only one host connection, front or rear, is allowed at a time.

2. Press the Save/Recall key.


3. Press F3 (Save Setup). The display shows the available file destinations.

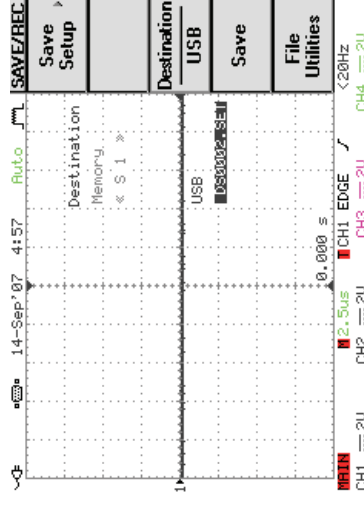

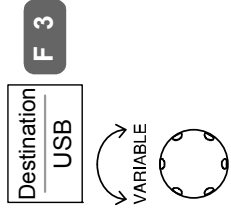
4. Press F3 (Destination) repeatedly to select the saved location. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.set).


Memory Internal memory, S1 ~ S20

USB

External flash drive, no practical limitation on the amount of file. When saved, the setup file is placed in the root directory.

- Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.

Setup save to D50005.SET completed

Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility

- To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.
- File Utilities

Save waveform

- (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port.


Front

Rear

Note: Only one host connection, front or rear, is allowed at a time.
- Press the Save/Recall key.

Save/Recall
- Press F4 (Save Waveform). The display shows the available source and destination options.

Save Waveform

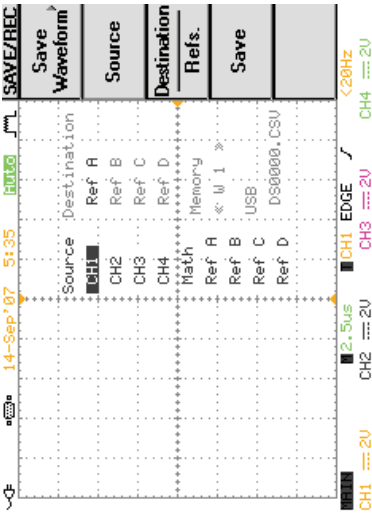

- Press F2 (Source). Use the Variable knob to select the source signal.

Source

- CH1 ~ CH2 (2CH model) Channel 1 ~ 2 signal
- CH1 ~ CH4 (4CH model) Channel 1 ~ 4 signal
- Math Math operation result (page63)
- RefA ~ D Internally stored reference waveforms A ~ D


- Press F3 (Destination) repeatedly to select the file destination. Use the Variable knob to select the memory location or file name.

Destination
USB

- Memory Internal memory, W1 ~ W20

- USB External flash drive, no practical limitation on the amount of file. When saved, the waveform file is placed in the root directory.
- Ref Internal reference waveform, A~D


6. Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.



Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.




PC software (FreeWave) Saving waveform is also available through the proprietary PC software, downloadable from GWInstek website.



Save display image

Panel operation 1. Connect the drive to the front or rear panel USB port.
 Note: Only one host connection, front or rear, is allowed at a time.





2. Press the Save/Recall key.



3. Press F5 (More).




4. Press F1 (Save Image). The display shows the available file destinations.

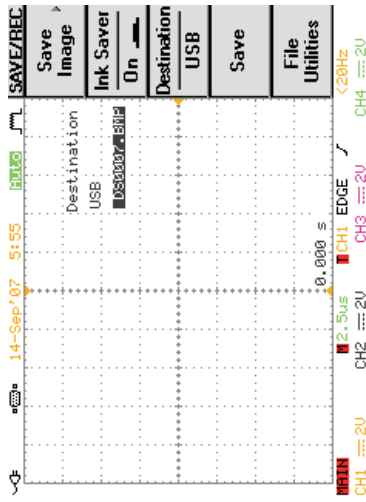


5. Press F2 (Ink Saver) repeatedly to invert the background color (On) or not (Off).





Ink Saver On (normal)

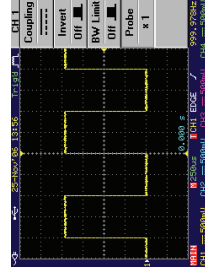

Ink Saver Off (inverted)

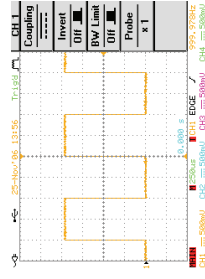


6. Press F3 (Destination). Use the Variable knob to select the file name.



USB

External flash drive, no practical limitation on the amount of file. When saved, the image file is placed in the root directory.

- Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.



Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility

To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



PC software (FreeWave)


Saving display image is also available through proprietary PC software, downloadable from GWInstek website.




Save All

Panel operation

- Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.
- Press the Save/Recall key.
- Press F5 (More).

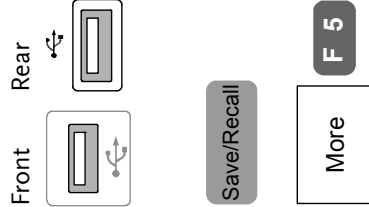

- Press F2 (Save All). The display shows the available file destinations. The following files are saved, contained in a folder.



Setup file (Axxx.set)


Two types of setups are saved: the current panel setting and the last internally saved setting (one of S1 ~ S20).

Display image (Axxx.bmp)

The current display image in bitmap format.

Waveform data (Axxx.csv)

Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W20).

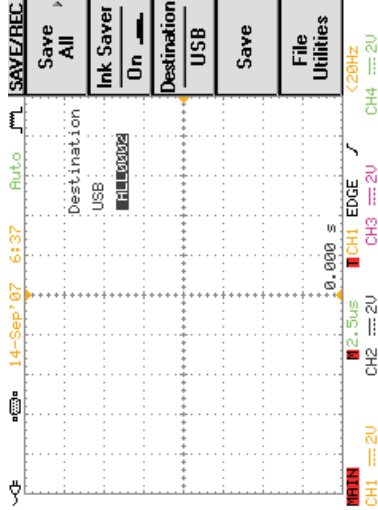


- Press F2 (Ink Saver)




repeatedly to invert the background color (On) or not (Off) for the display image.

Ink Saver On (normal)

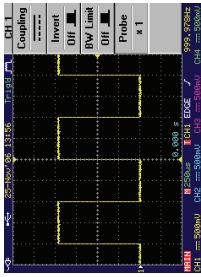

Ink Saver Off (inverted)

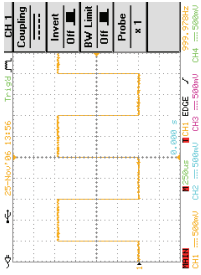


6. Press F3 (Destination). Use the Variable knob to select the file name.



USB

External flash drive, no practical limitation on the amount of file. When saved, the folder is placed in the root directory.

7. Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.




Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.

8. Together with the current setup/waveform/image, the last saved waveform file (one from W1 ~ W20) and setup file (one from S1 ~ S20) are also included in the folder.

USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



Recall

File type/source/destination

Item	Source	Destination
Default panel setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel
Reference waveform	<ul style="list-style-type: none"> Internal memory: A ~D 	<ul style="list-style-type: none"> Current front panel

Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 ~ S20 External memory: USB 	<ul style="list-style-type: none"> Current front panel
--------------------------	---	---

Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> Internal memory: W1 ~ W20 External memory: USB 	<ul style="list-style-type: none"> Reference waveform A ~D
----------------------------	---	---




Display image (DSxxxx.bmp)

- External memory: USB
- Display

Recall default panel setting


- Press the Save/Recall key.
- Press F1 (Default Setup). The factory installed setting is recalled and replaces the current panel setting.

Setting contents The following is the default setting contents.



Acquisition	Mode: Normal	Memory length: 500
Channel	Scale: 2V/Div	CH1: On, CH2/3/4: Off
	Coupling: DC	Invert: Off
	BW limit: Off	Probe attenuation: x1
Cursor	Source: CH1	Horizontal: None
	Vertical: None	
Display	Type: Dots	Accumulate: Off
	Graticule: 	
Go-NoGo	Go-No: Off	Source: CH1
	NoGo when: 	Violating: Stop
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
	Type: + (Add)	Channel: CH1+CH2
Math	Position: 0.00 Div	Unit/Div: 2V
	Source1, 2: CH1, CH2	Type: VPP, Freq, FRR
Program	Mode: Edit	Step: 1
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
Utility	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
	SaveImage, InkSaver Off	GPIB, Address 8
	Sound: Off	


Recall reference waveform on the display


Panel operation 1. The reference waveform must be stored in advance. See page for waveform store details.

2. Press the Save/Recall key. 


3. Press F2 (Display Refs). The reference waveform display menu appears.  **F 2**

4. Select the reference waveform from F1 (Ref A) to F4 (Ref D) and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu.  **F 2** →  **F 2**

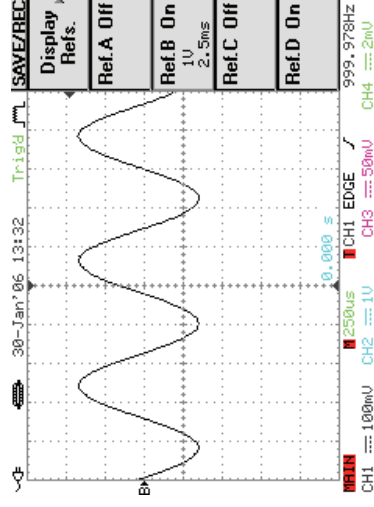

5. To clear the waveform from the display, press F1 ~ F4 key again.  **F 2**

Recall panel setting

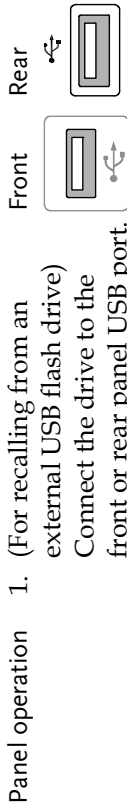

1. (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port.

Note: Only one host connection, front or rear, is allowed at a time.

Save/Recall


2. Press the Save/Recall key.

More

3. Press F5 (More).


Recall Setup

4. Press F3 (Recall Setup). The display shows the available file sources.

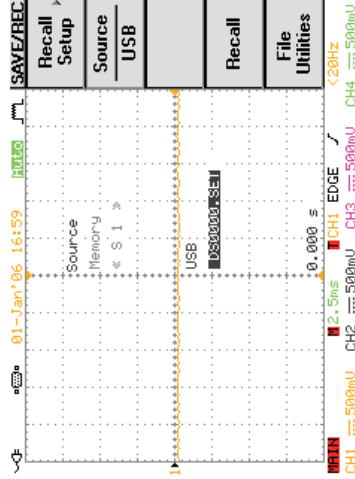

Source
USB

5. Press F2 (Source) repeatedly to select the file source,

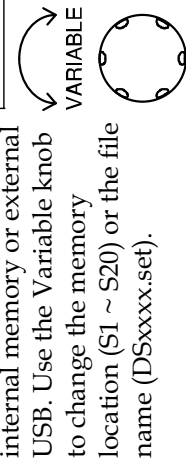

internal memory or external USB. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.set).

- Memory Internal memory, S1 ~ S20
- USB External flash drive, no practical limitation on the amount of file. The setup file must be placed in the root directory to be recognized.

Recall

6. Press F4 (Recall) to confirm recalling. When completed, a message appears at the bottom of the display.

Setup recalled from S 1

Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.

File Utilities


- To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.

USB file utility

Recall waveform

1. (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port.

Note: Only one host connection, front or rear, is allowed at a time.

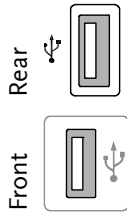

Save/Recall


2. Press the Save/Recall key.

More


3. Press F5 (More).

Recall Waveform

4. Press F4 (Recall Waveform). The display shows the available source and destination options.

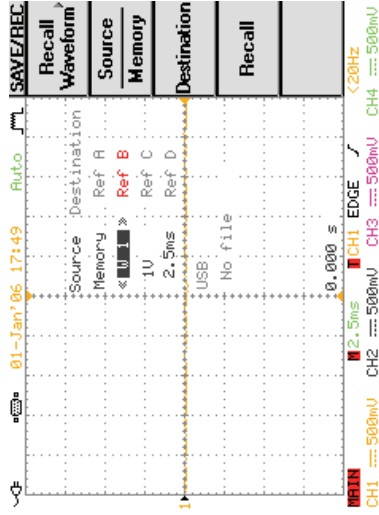


5. Press F2 (Source) repeatedly to select the file source, internal memory or external USB. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.csv).

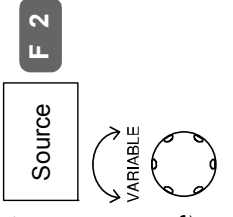


Memory Internal memory, W1 ~ W20
 USB External flash drive, no practical limitation on the amount of file. The waveform file must be placed in the root directory to be recognized.

6. Press F3 (Destination). Use the Variable knob to select the memory location.

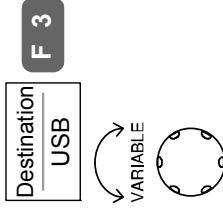

RefA ~ D Internally stored reference waveforms A ~ D

7. Press F4 (Save) to confirm recalling. When completed, a message appears at the bottom of the display.

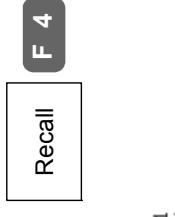

Note

The file will not be saved if the power is turned Off or USB drive is taken out before the message.


USB file utility

To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



Recall image

- Panel operation
1. Connect the USB drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

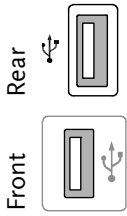


2. Press the Save/Recall key.





3. Press F5 (More).




4. Press F5 (Recall Image). The display shows the available source options.

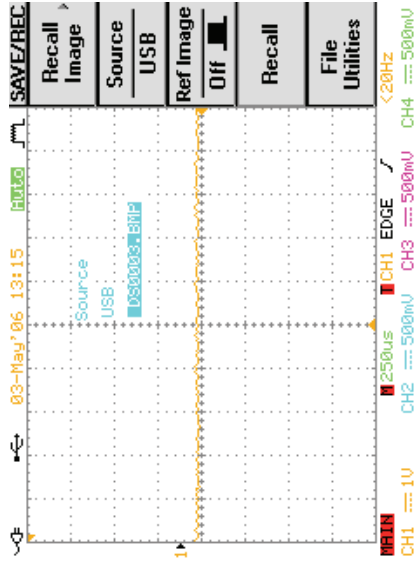


5. To select the source image file, press F2 (Source) and use the Variable knob.



6. To show the image on the display, press F3 (Ref Image) ON or F4 (Recall).

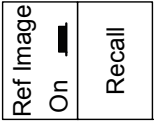

7. The image appears on the display and the "R" indicator appears at the top left corner of the display.

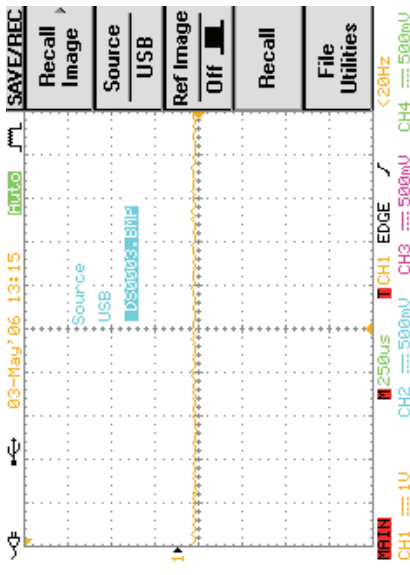

8. To clear the image off the display, press F3 (Ref Image) OFF.



PRINT OUT

Display printout is also available using proprietary PC software, downloadable from GWinstek website.

Overview

Printout step Listed below are the steps that have to be followed when printing out the display image through USB connector.

1. Connect the printer to the USB host port
2. Configure the interface to printout mode
3. Configure the content and printout
4. Printout

1 Connect printer

1. Connect the printer to the USB host port, front or rear panel.



USB Note Using the front and rear USB host port at the same time is forbidden (Example: printer to the rear panel, storage device to the front panel).

2 Configure interface

Panel operation 1. Press the Utility key.



2. Press F2 (Interface menu).



3. Press F1 (Type) repeatedly to select USB.



4. Press F5 (Previous menu).



5. Press F1 (Hardcopy menu).



6. Press F1 (Function) repeatedly to select Printer.



3 Configure content

Panel operation 1. Press the Utility key.




2. Press F1 (Hardcopy Menu).



3. Press F1 (Function) repeatedly to select Printer if it is not selected yet.




- To invert the color for the saved or printed display image, press F2 (Ink Saver) and turn On the Ink Saver.




F 2

- Ink Saver On (normal) Ink Saver Off (inverted)

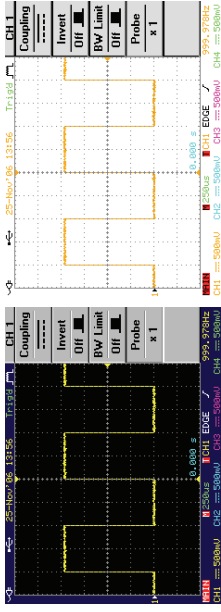


- To select black/white or color printing, press F3 (Portrait) repeatedly; Gray (b&w) or Color.




F 3

- To select the printed size, press F4 (Ratio). Use the Parameter knob to change the ratio with respect to the real display size.



F 4

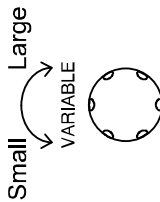

Range 10% ~ 100%

4 Printout

Press the Hardcopy key. The display image is printed out.



REMOTE CONTROL CONFIG

This chapter describes basic configuration of IEEE488.2 based remote control. For command list, refer to the programming manual downloadable from GWInstek website, www.gwinstek.com.tw.

Configuration	Configure USB interface	149
	Configure RS-232C interface	150
	Configure GPIB interface (optional)	152
	USB/RS-232C remote control software	154

Interface Configuration

Configure USB interface

USB configuration	PC side connector	Type A, host
	GDS-2000 side connector	Type B, slave
	Speed	1.1/2.0 (full speed)


Panel operation 1. Press the Utility key.



2. Press F2 (Interface Menu).




3. Press F1 (Type) repeatedly to select USB.



4. The interface icon at the top of the display changes into USB type.



5. Connect the USB cable to the rear panel slave port.



6. When the PC asks for the USB driver, select `gds2k_cdc.inf` included in the FreeWave software package downloadable from GW website, www.gwinstek.com.tw. GDS-2000 product corner. The driver file automatically sets GDS-2000 as serial port COM7.

Configure RS-232C interface

RS-232C configuration	Connector	DB-9, Male
	Baud rate	2400, 4800, 9600, 19200, 38400
	Parity	None, Odd, Even
	Data bit	8 (fixed)
	Stop bit	1, 2

Panel operation 1. Press the Utility key.



2. Press F2 (Interface Menu).



3. Press F1 (Type) repeatedly to select RS-232C.



4. The interface icon at the top of the display changes into RS-232C type.



5. To change the baud rate, press F2 (Baud Rate) repeatedly.



Range 2400, 4800, 9600, 19200, 38400


6. To change the stop bit, press F3 (Stop Bit) repeatedly.



Range 1, 2



7. Data bit is fixed at 8.

8. To change the parity, press F4 (Parity) repeatedly.



Range None, Odd, Even


9. Connect the RS-232C cable to the rear panel port: DB-9 male connector. For functionality check see page 154.

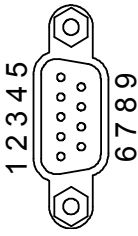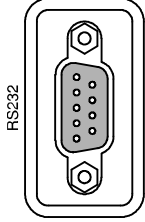

- 1: RxD (Receive data)
- 2: RxD (Receive data)
- 3: TxD (Transmit data)
- 5: GND
- 4, 6 ~ 9: No connection

PC connection

Use the Null Modem connection as in the below diagram.

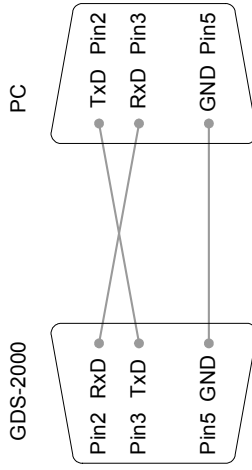


Configure GPIB interface (optional)


GPIB module installation

The optional GPIB module is available as a separate kit. Follow the instruction to install the module properly.

1. Turn Off the GDS-2000 power switch.
2. Take off two screws and remove the rear panel GPIB module cover.

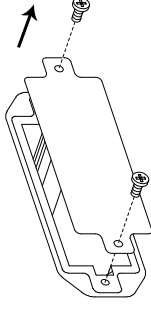

3. Insert the GPIB module and put the screws back.

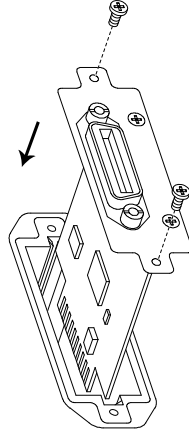

4. Turn On the GDS-2000 power switch.



Configure GPIB

1. Press the Utility key.



2. Press F2 (Interface Menu).



3. Press F1 (Type) repeatedly to select GPIB.



4. The interface icon at display top changes to GPIB.




5. Press F2 (Address). Use the Variable knob to change the GPIB address.




Range 1 ~ 30

6. Connect the GPIB cable to the rear panel port: 24-pin female connector.



- GPIB constraints**
- Maximum 15 devices altogether, 20m cable length, 2m between each device
 - Unique address assigned to each device
 - At least 2/3 of the devices turned On
 - No loop or parallel connection

Pin assignment



Pin1	Data line 1	Pin13	Data line 5
Pin2	Data line 2	Pin14	Data line 6
Pin3	Data line 3	Pin15	Data line 7
Pin4	Data line 4	Pin16	Data line 8
Pin5	EOI	Pin17	REN
Pin6	DAV	Pin18	Ground
Pin7	NRFD	Pin19	Ground
Pin8	NDAC	Pin20	Ground
Pin9	IFC	Pin21	Ground
Pin10	SRQ	Pin22	Ground
Pin11	ATN	Pin23	Ground
Pin12	Shield (screen)	Pin24	Signal ground

USB/RS-232C remote control software

Terminal application (USB/RS-232C)
 Invoke the terminal application such as MTTY (Multi-Threaded TTY). For RS-232C, set the COM port, baud rate, stop bit, data bit, and parity accordingly.

To check the COM port No, see the Device Manager in the PC. For WinXP, Control panel → System → Hardware tab.

Functionality check

Run this query command via the terminal.
 *!dn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.


GW, GDS-2064, 000000001, V1.00

PC Software (USB only)


The proprietary PC software, downloadable from GWInstek website, can be used for remote control. This mode is available only for USB interface.

BATTERY OPERATION


The optional battery allows portable operations such as field applications. Battery packs and related internal components are factory installed items; contact the service center for new installation.

Warning  Never insert or remove the battery while the power is On.

Battery insertion 1. Turn Off the power and take off the power cord.

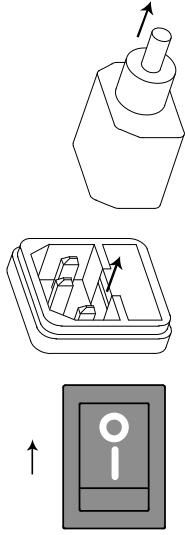


2. Open the rear panel battery pack cover.

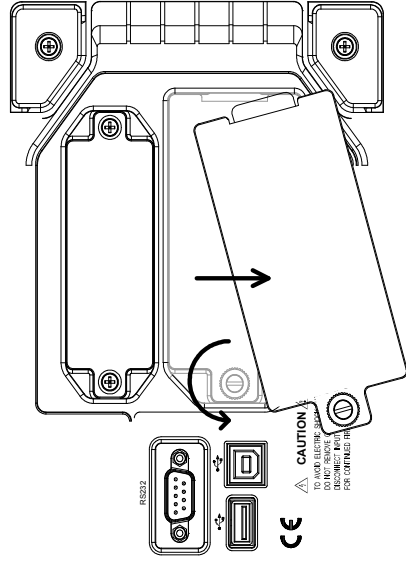

3. Insert the battery packs and close the cover.

4. Turn On the power and make sure the battery icon appears at the top left corner of the display.



Rating	Type	Li-Ion battery x 2, 11.1V average
	Running time	3 hours typical
	Charging time	8 hours typical when Power Off
		16 hours typical when Power On

Battery status 1. To view the battery installation and recharge status, press the Utility key.

2. Press F5 (More).

3. Press F2 (System Info).

4. The battery status (output voltage and charging rate) appears on the lower half of the display.

BATTERY INFORMATION	
BAT. #1	BAT. #2
Voltage: 12.05V	12.04V
Capacity: 98%	94%

Note

- When the battery is not in use for a long time, take them out to prolong the battery life.
- Battery operation requires additional components that are factory installed. Merely inserting battery packs into standard GDS-2000 does not work. For new installation, contact Goodwill.

MAINTENANCE

Two types of maintenance operations are available: calibrate vertical resolution, and compensate the probe. Run these operations when using GDS-2000 in a new environment.

Vertical Resolution Calibration

Panel operation 1. Press the Utility key.



2. Press F5 (More).




3. Press F1 (Self Cal Menu).



4. Press F1 (Vertical).



5. The buzzer sounds and the message "Set CAL to CH1, then press F5" appears at the bottom of the display.




6. Connect the calibration signal from the rear panel CAL out to Channel1 input.

7. Press F5.




(no menu item)

8. The calibration for Channel1 starts and ends automatically, in less than 5 minutes.



9. When finished, connect the calibration signal to Channel2 and press F5. Channel2 calibration starts.




10. (for 4 Channel model only) Repeat the above step for Channel 3 and 4.

11. When the calibration for all channels is completed, the display goes back the default state.

Probe Compensation

Panel operation


1. Connect the probe between Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe attenuation to x10.

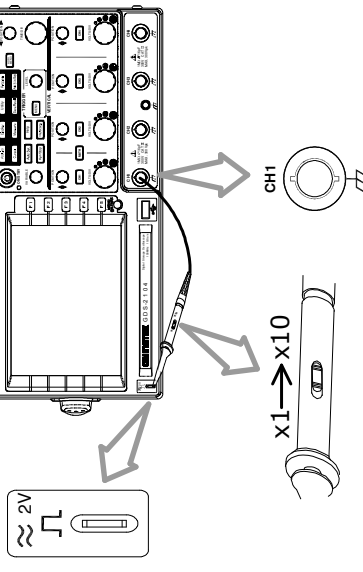


2. Press the Utility key.




3. Press F5 (More) twice.



4. Press F1 (ProbeComp Menu).




5. Press F1 (WaveType) repeatedly to select the standard square wave.




6. Press the Auto Set key. The compensation signal appears on the display.



7. Press the Display key, then F1 (Type) twice to select the vector waveform.

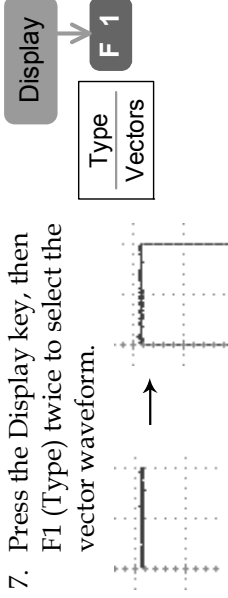

8. Turn the adjustment point on the probe until the signal edge becomes sharp.

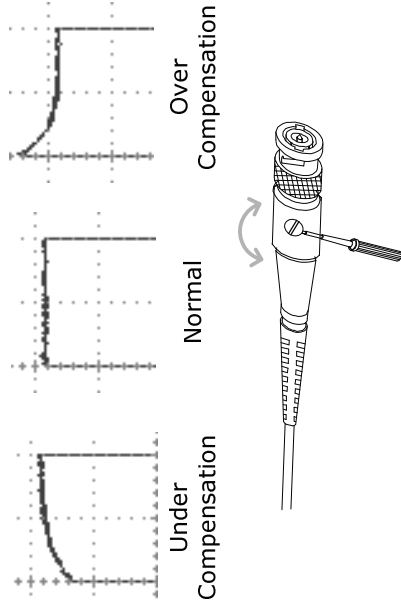

FAQ

- I pressed the Power (On/Standby) key on the front panel but nothing happens.
- I connected the signal but it does not appear on the display.
- I want to remove the (Measurement result / FFT result / Help contents) from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Auto Set does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The display image printout is too dark on the background.
- I want to install the optional battery pack.
- I put the battery pack in but it is not working.
- The date and time setting are not correct.
- USB does not work.
- The accuracy does not match the specification.

I pressed the Power (On/Standby) key on the front panel but nothing happens.

Make sure you turned On the rear panel Power switch. For power up sequence, see page22.

I connected the signal but it does not appear on the display.

Make sure you have activated the channel by pressing the Channel key (the LED turns On).

I want to remove the (Measurement result / FFT result / Help contents) from the display.

To clear automatic measurement result, press the Measure key twice, then Press F4 (OFF). See page54 for details.

To clear FFT result, press the Math key twice. See page63 for details.

To clear Help result, press the Help key again. See page45 for details.

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page49 for details.

If this does not help, the trigger mode might be set to Single. Press the Trigger menu key, then F3 (Mode) to Auto. See page105 for trigger setting details.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page158. Note that the frequency accuracy and duty factor are not specified for probe compensation waveform and therefore it should not be used for other reference purpose.

Auto Set does not catch the signal well.

Autoset function cannot catch signals under 30mV or 30Hz. Please use the manual operation. See page48 for Auto Set details.

I want to clean up the cluttered panel settings.

Recall the default settings by pressing Save/Recall key→F1. For default setting contents, see page44.

The display image printout is too dark on the background.

Use the Inksaver function which reverses the background color. For details, see page145.

I want to install the optional battery pack.

I put the battery pack in but it is not working.

The battery pack needs additional internal components to work properly. They are factory installed items: contact your dealer. For battery operation details, see page155.

The date and time setting are not correct.

For date and time setting details, please see page116. If it does not help, the internal battery controlling the clock might be worn out. Contact your dealer or GWInstek.

USB does not work.

Make sure you are not using the front and the rear USB host connector at the same time. Disconnect either of the USB device and try again.

The accuracy does not match the specification.


Make sure the device is powered On for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

For more information, contact your local dealer or GWInstek at www.gwinstek.com.tw / marketing@goodwill.com.tw.


APPENDIX

Fuse Replacement

- Step 1. Take off the power cord and remove the fuse socket using a minus driver.

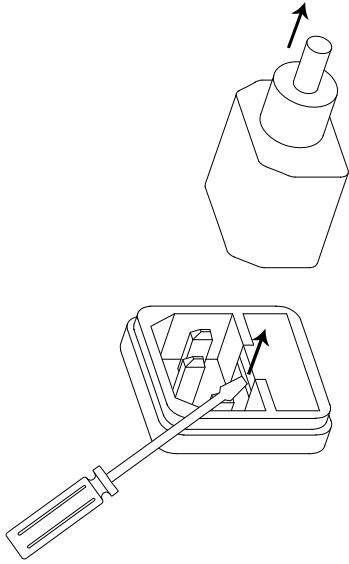

2. Replace the fuse in the holder.

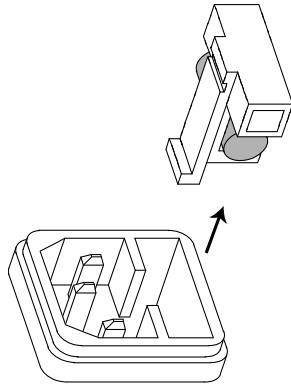

Rating

T2A, 250V

GPIB Module Installation


For GPIB interface and remote control details, see page 148.

GPIB kit contents • GPIB module


- Programming manual (programming manual is also downloadable from GWInstek website).

Step


1. Turn Off the GDS-2000 power switch.




2. Take off two screws and remove the rear panel GPIB module cover.

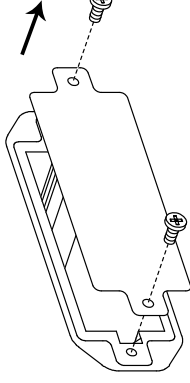

3. Insert the GPIB module and put the screws back.

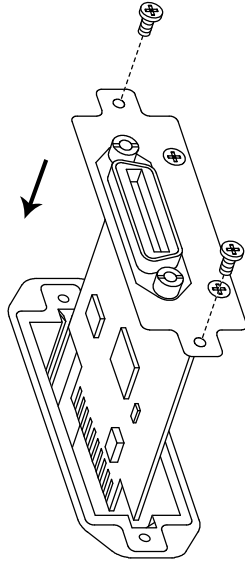

4. Turn On GDS-2000. Press the Utility key, then F2 (Interface) repeatedly. Make sure GPIB menu is selectable, and a GPIB icon appears on the top left corner of the display.

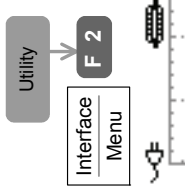

GDS-2000 Specifications

The specifications apply when GDS-2000 is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific

GDS-2062	Channels	2
	Bandwidth	DC ~ 60MHz (-3dB)
	Rise time	5.8ns approx.
GDS-2064	Channels	4
	Bandwidth	DC ~ 60MHz (-3dB)
	Rise time	5.8ns approx.
GDS-2102	Channels	2
	Bandwidth	DC ~ 100MHz (-3dB)
	Rise time	3.5ns approx.
GDS-2104	Channels	4
	Bandwidth	DC ~ 100MHz (-3dB)
	Rise time	3.5ns approx.
GDS-2202	Channels	2
	Bandwidth	DC ~ 200MHz (-3dB)
	Rise time	1.75ns approx.
GDS-2204	Channels	4
	Bandwidth	DC ~ 200MHz (-3dB)
	Rise time	1.75ns approx.

Common

Vertical	Sensitivity	2mV/div~5V/Div (1-2.5 increments)
	Accuracy	± (3% x Readout +0.05div x Volts/div + 0.8mV)
Input Coupling	AC, DC, Ground	
	Input Impedance	1MΩ±2%, ~16pF
Polarity	Normal & Invert	
	Maximum Input	300V (DC+AC peak), CAT II
Math operation	+, -, FFT	
	Offset Range	2mV/div~20mV/div: 0.5V 50mV/div~200mV/div: 5V 500mV/div~2V/div: 50V 5V/div: 300V
Bandwidth Limit	20MHz (-3dB)	

Trigger	Sources	CH1, CH2, Line, EXT (2ch model only), CH3, CH4 (4ch model only)
	Modes	Auto-Level, Auto, Normal, Single, TV, Edge, Pulse Width, Time-Delay, Event-Delay (2ch model only)
Coupling	AC, DC, LFrej, HFrej, Noise rej	
	Sensitivity	DC~25MHz: Approx. 0.5div or 5mV 25MHz~max: Approx. 1div or 10mV
Holdoff	40ns ~ 2.5s	
	Range	±15V
External Trigger (2ch model only)	Sensitivity	DC~30MHz: ~50mV 30MHz~max: ~100mV
	Input Impedance	1MΩ±2%, ~16pF
Horizontal	Maximum Input	300V (DC + AC peak), CAT II
	Range	1ns/div~10s/div, 1-2.5 increment Roll mode: 250ms/div ~ 10s/div
Modes	Main, Window, Window Zoom, Roll, Scan, X-Y	
	Accuracy	±0.01%
Pre-Trigger	20 div maximum	
	Post-Trigger	1000 div
X-Y Mode	X-Axis Input	Channel 1
	Y-Axis Input	Channel 2
Phase Shift	±3° at 100kHz	
	Real-Time	1G Sa/s maximum
Signal Acquisition	Equivalent Vertical	25G Sa/s maximum 8 bits
	Resolution	
Record Length	25K Dots Maximum	
	Acquisition	Normal, Peak Detect, Average
Peak Detection	10ns	
	Average	2, 4, 8, 16, 32, 64, 128, 256
Voltage	Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot	
	Time	Freq, Period, Rise Time, Fall Time, Positive Width, Negative Width, Duty Cycle
Delay	FRR, FRF, FFR, FFF, LRR, LRF, LFF	
	Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors

Probe Specifications

Model-specific

GTP-060A	Applicable to Bandwidth Rise time	GDS-2062, GDS-2064 DC ~ 60MHz @ Position x 10 5.8ns
GTP-150A	Applicable to Bandwidth Rise time	GDS-2102, GDS-2104 DC ~ 150MHz @ Position x 10 2.3ns
GTP-250A	Applicable to Bandwidth Rise time	GDS-2202, GDS-2204 DC ~ 250MHz @ Position x 10 1.4ns

Common

Attenuation Ratio	10:1
Input Resistance	10M Ω when used with 1M Ω input oscilloscope
Input Capacitance	23pF approx. for GTP-060A 15pF approx. for GTP-150A 17pF approx. for GTP-250A
Compensation Range	10 ~ 35pF
Maximum Input Voltage	500V CAT I, 300V CAT II (DC+Peak AC) Derating with frequency
Attenuation Ratio	1:1
Bandwidth	DC ~ 6MHz
Rise Time	58ns
Input Resistance	1M Ω when used with 1M Ω input oscilloscope
Input Capacitance	128pF for GTP-060A, 47pF for GTP-150A, 47pF for GTP-250A (+ oscilloscope capacitance)
Compensation Range	10 ~ 35pF
Maximum Input Voltage	300V CAT I, 150V CAT II (DC+Peak AC) Derating with frequency
Temperature	-10°C ~ 55°C
Relative Humidity	\leq 85% @35°C
Safety Standard	EN61010-031 CAT II

Auto Counter	Resolution: 6 digits Accuracy: \pm 2% Signal source: All available trigger source except the Video trigger
Control Panel Function	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
Save Setup	Internal memory: 20 sets USB Flash drive: unlimited
Save Waveform	Internal memory: 20 sets USB Flash drive: unlimited
Save display image	USB Flash drive: unlimited
Display	LCD Resolution (dots) Graticule
Interface	Co-No Go Output RS-232C GPIB (Optional) USB
Power Source	Line Voltage Battery (Optional)
Miscellaneous	Language Selection On-Line Help Real-Time Clock
Operation Environment	Ambient temperature Relative humidity
Storage Environment	Ambient temperature Relative humidity
Dimensions	254 (D) x 142 (H) x 310 (W) mm
Weight	Approx. 4.3kg

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

- (1) No.7-1, Jhongsing Rd., Tucheng City, Taipei County, Taiwan
- (2) No. 69, Lu San Road, Suzhou City (Xin Qu), Jiangsu Sheng, China

declare, that the below mentioned product

Type of Product: Power Supply

Model Number: GDS-2062, GDS-2064, GDS-2102, GDS-2104,

GDS-2202, GDS-2204

are herewith confirmed to comply with the requirements set out in the

Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (89/336/EEC, 92/31/EEC, 93/68/EEC) and Low Voltage Directive (73/23/EEC, 93/68/EEC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© **EMC**

EN 61326-1: Electrical equipment for measurement, control and laboratory use -- EMC requirements (1997 + A1:1998 + A2:2001 + A3:2003)	
Conducted Emission	Electrical Fast Transients EN 61000-4-4: 2004
Radiated Emission	
EN 55011: Class A 1998 + A1:1999 + A2:2002	
Current Harmonics	Surge Immunity EN 61000-4-5: 1995 + A1:2001
EN 61000-3-2: 2000 + A2:2005	
Voltage Fluctuations	Conducted Susceptibility EN 61000-4-6: 1996 + A1:2001
EN 61000-3-3: 1995 + A1:2001 + A2:2005	
Electrostatic Discharge	Power Frequency Magnetic Field EN 61000-4-8: 1993 + A1:2001
EN 61000-4-2: 1995 + A1:1998 + A2:2001	
Radiated Immunity	Voltage Dip/ Interruption EN 61000-4-11: 2004
EN 61000-4-3: 2002 + A1:2002	

© **Safety**

Low Voltage Equipment Directive 73/23/EEC & amended by 93/68/EEC	
Safety Requirements IEC/EN 61010-1: 2001	

INDEX

2-4 channel difference.....	10	coupling mode.....	102
AC coupling.....	102	menu tree.....	27
acquisition.....	84	cursor.....	59
menu tree.....	26	menu tree.....	27
addition.....	64	shortcut.....	27
menu tree.....	29	specification.....	166
auto level.....	108	cycle time measure.....	55
auto set.....	48	date setting.....	116
effect on channel.....	47	faq.....	162
exception.....	48	indicator.....	20
faq.....	161	menu tree.....	43
specification.....	167	DC coupling.....	102
auto template.....	74	declaration of conformity.....	169
auto trigger.....	106	default setup.....	136
automatic measurement.....	56	contents.....	44
faq.....	161	effect on channel.....	47
menu tree.....	30	menu tree.....	32
overview.....	54	delay measure.....	55
shortcut.....	30	delay trigger.....	110
specification.....	166	menu tree.....	37
average acquisition.....	84	display.....	92
average voltage measure.....	55	contrast setting.....	92
bandwidth limitation.....	103	diagram.....	19
battery.....	155	grid setting.....	93
faq.....	162	menu tree.....	28
icon on power up.....	22	save image.....	131
specification.....	167	shortcut.....	28
blackman window.....	64	specification.....	167
buzzer.....	69	dot waveform.....	90
menu tree.....	39	download information.....	12
calibration, vertical resolution.....	157	duty cycle measure.....	55
caution symbol.....	5	ECL.....	107
channel.....	47	edge trigger.....	109
faq.....	160	menu tree.....	37
menu tree.....	27	EN61010.....	169
shortcut.....	27	measurement category.....	6
status indicator.....	20	pollution degree.....	7
cleaning the instrument.....	7	environment.....	167

safety instruction 7

equivalent time sampling 89

external trigger 106

input terminal 16

specification 166

falling time measure 55

FFT 66

horizontal cursor 60

menu tree 29

overview 63

vertical cursor 62

file format 119

firmware version 115

flattop window 64

FM example 87

frequency measure 55

front panel diagram 13

fuse replacement 163

safety instruction 7

generic purpose signal 52

go-nogo 68

how to configure 69

how to run 75

menu tree 41

output specification 167

output terminal 76

template menu tree 41

GPB 152

module installation 164

ground

coupling 102

symbol 5

terminal 16

hanning window 63

hardcopy 125

menu tree 40

shortcut 40

help 45

faq 161

high voltage measure 54

holdoff 108

horizontal 94

basic operation 50

cursor menu tree 27

cursor operation 59

menu tree 28

position 94

compensation menu tree 42

compensation signal overview 52

faq 161

memory length demonstration 88

package list 12

peak detect demonstration 85

specification 168

program 77

how to edit 78

how to run 80

menu tree 31

shortcut 31

program manual download 12

pulse time measure 55

pulse width trigger 113

menu tree 37

real time sampling 89

rear panel diagram 17

recall 136

default setup 136

menu tree 32

reference waveform 138

setup 139

shortcut 32

waveform 141

rectangular window 64

reference waveform

how to recall 138

menu tree 32

remote control 148

interface configuration 149

rising time measure 55

roll mode 97

RS-232C interface 150

run/stop 49

faq 161

horizontal position 94

horizontal scale 95

save 127

display image 131

menu tree 32

save all 133

setup 128

shortcut 32

specification 167

waveform 129

scan mode 96

SECAM 107

serial number 115

service operation

about disassembly 6

contact 162

setup

default contents 44

file format 121

how to recall 139

how to save 128

menu tree 33

recall menu tree 34, 35

short memory 87

single trigger mode 106

faq 161

with run/stop 49

spike noise example 87

stop icon 49

subtraction 64

menu tree 29

system information 115

battery 156

template for go-nogo 71

tilt stand 21

time setting 116

faq 162

indicator 20

menu tree 43

trigger 105

delay 110

edge 109

menu tree 36

parameter 106

pulse width 113

shortcut 36

single trigger with run/stop 49

specification 166

status indicator 20

video 112

TTL 107

UK power cord 8

USB

driver download 12

faq 162

file menu tree 36

file operation 122

PC software download 154

remote control interface 149

utility

key overview	14
menu tree	39
shortcut	39
vector waveform	90
vertical	101
basic operation	51
cursor menu tree	27
cursor operation	61
position	101
resolution calibration	157
scale	101
specification	165
video line	107
video trigger	112
menu tree	36
warning symbol	5
waveform	
accumulation	91
file contents	120
how to recall	141
how to save	129
invert waveform	103
recall menu tree	34, 35
roll mode	97
scan mode	96
x-y mode	99
zoom mode	98
waveform color	19
x-y mode	99
specification	166
zoom waveform	98